

## 安全警告:

- 1、请勿将产品及配件靠近火源或任何过热的环境中。
- 清勿将产品及配件接触水及湿气,不要在靠近水的地方使 用本设备,也不要将产品浸入任何液体中,避免产品及配
- 件受到水滴或水溅。 3、请勿自行打开或任意拆解、维修电池组件,如果电池更换 不当会有爆炸危险,严禁将电池投入水、火中或靠近任何 过热的环境中。
- 4、本产品由外接电源适配器(5V1.5A电源)充电后使用,充 完电后可方便的通过拔掉电源适配器插头断开电网电源。
- 5、当用户暂不使用本产品时,请将产品电源开关旋转至关闭 状态关闭电源(参见产品操控示意图),避免电池电量的 流失。
- 6、当禁止使用无线设备或设备的使用会引起电子设备的干扰 与安全隐患时,请关闭本产品。
- 7、在易燃易爆区域,请关闭本产品,并遵守相关标示说明, 以免引起爆炸或火灾。易燃易爆区域包括但不限于:加油 站、易燃或化工制品运输及储存设施、有爆炸危险标志的 区域,有"关掉双向无线电设备"标志的区域。
- 8、乘坐飞机时,请遵守航空公司有关规定和条例,在飞机起 飞前关闭本产品,以免造成安全隐患。
- 9、仅适用于非热带气候条件下安全使用,仅适用于海拔2000米以下地区安全使用。

# 产品卖点:

采用3.2寸全纸盆外磁喇叭,峰值可达20W;
 专利外观,人体工学设计,精美,大气;
 采用十度原声扩音电声系统,扩音声音传输真实,稳定;
 蓝牙5.0云控,支持网络同步教材,音乐在线播放;
 2500mAh A品动力电池,电池保用3年;
 支持TF卡、U盘、蓝牙播放功能;

## 数据参数:

输出功率	20W	频率响应	80Hz-18KHz
喇叭阻抗	4Ω	工作温度	-10°C-45°C

注意:因本机为大功率扩音器,在小面积教室或会场使用时,请在插入麦 克风前将音量调节至最小位置,以免声音过大,造成回声、啸叫。插入麦 克风后根据自己所在的场地面积进行音量微调,达到最佳扩音效果。

#### 主要功能说明:



# 产品保修卡

购买产品时,请认真填写此卡,并予以妥善保存。

# 用户档案

用户姓名	
性别	
通讯地址	
邮编	
联系电话	
购买地点	
购买日期	
品名及规格	
销售单号	
机身编号	
经销商签名	
用户签名	

### Please read the instructions carefully before using it.

Before turn on the amplifier, ensure that the MIC don't point at the amplifier, this will eliminate any annoyance associated with howling. For ensure better amplification, aim at the headset MIC capsule when speaking, and keep the distance between the voice amplifier and the MIC more than 60cm to avoid howling. Simply tucking the speaker around waist, and mounting headphone over head can help achieve the required

distance. Please turn down the volume properly to avoid howling

when you are using this device in a small room.

#### Specification:

Max output power:	20W	Frequency response:	80Hz-18KHz
Output Impedance:	4Ω	Work temperature:	-10℃-45℃

### Function Illustration:





1.Power switch & volume control: Rotate the knob to "ON" to turn on the amplifier, rotate to "ON" continuously to increase the volume, rotate to "OFF" continuously to decrease the volume till turn off.

#### 2.Mode:

A.Short press it to switch to TF card play/USB flash drive play/AUX mode/Bluetooth mode/UHF mode. B.When play music on TF card/USB flash drive, long press "M" key for 3 seconds to switch to single song repeat. Long press it again to switch back to all repeat.

#### 3.Recording

 A.Next: Short press to play next song, long press to fast forward.

5.Play/Pause: Short press it to pause, and press again to play.

**6.Previous:** Short press to play previous song, long press to fast rewind.

7.Microphone ECHO control

#### 8.LED Indicator:

Blue light flashing: Bluetooth is waiting for connection.
 Blue light stop flashing: Bluetooth is connected.
 Red light flashing one by one: Charging.

9.TF card slot: Insert the TF card to play mp3. It is compatible with most brands, the maximum capacity is 32GB. Note: It may be unreadable when the file is large or complex.

10.USB flash drive slot: Insert the USB flash drive to play mp3. It is compatible with most brands, the max capacity is 32GB.

Note: It may be unreadable when the file is large or complex.

**11.DC 5V Charging Port:** Please use the DC 5V charger, and the other end connects with the power supply AC 110~220V.

12.Ø3.5mm Microphone Jack: Insert the wired microphone in any mode to amplify with current mode simultaneously. To avoid howling please do not point the microphone toward the speaker. (There is no wired MIC in wireless version.)

**13.Audio input:** Connect with the computer, phone, MP3/MP4 and other AUX, short press "M" to switch to the AUX IN mode that can play all above audio files directly.



①电源开关/音量调节:将拨轮开关拨至"ON"方向,当听到"咔"的一声, 表示已经开机;同时拨动到"ON"方向为音量加,拨至"OFF"方向为音量 减;将拨轮开关拨至"OFF"位置,当听到"咔"的一声,表示机器关机。
②模式切换:1.短按"M"键可用于U盘/TF卡/蓝牙/音频模式/无线模式之间的切换;2.在音乐模式下长按"M"键为单曲循环,再次长按"M"键为全 部循环功能。

#### ③录音按键

④下一曲:长按"▶Ⅰ"为快进,短按为下一曲。
 ⑤播放/暂停:在音乐模式下短按"▶Ⅰ"键为暂停,再次短按为播放。

⑥上一曲:长按" 📢 "为快退,短按为上一曲。

## ⑦麦克风混响调节

⑧LED指示灯:1.蓝色指示灯快速闪烁表示蓝牙正在等待配对;2.蓝色指示灯长亮为配对成功;3.红色指示灯逐个闪烁表示正在充电。

⑨TF卡卡槽 ⑩USB 插口:(仅限数据传输读取U盘数据)

(1)DC 5V

#### ⑫MIC麦克风接口:本机支持有线麦克风输入,无线版标配不含有线麦 古风

③AUX音频输入:将机器通过音频线与电脑、手机、MP3、MP4等外接音 源连接后,短按"M"键切换到音频模式,即可直接播放上述音源。

### TF卡/U盘播放功能:

按照主机标识的方向将TF卡/U盘正确插入主机TF卡/U盘槽后,主机将 自动播放TF卡/U盘中的音乐文件,同时可通过操作上一曲、下一曲键选 择自己喜欢的曲目。

注:请勿将TF卡/U盘内的音乐文件存放在文件夹内,系统将无法读取。 本机支持MP3/WAV/WMA/FLAC/APE音乐格式。

## 录音功能:

- - - - -

 1.连接话筒,在任意模式下插入外接存储器(U盘或是TF卡),长按"●" 键主机提示开始录音表示开始录音;在录音模式下,再次短按"●"键保存并开始播放录音。

2.在音乐模式下,如果外接存储器里有录音文件,短按"●"键进入播放录音状态,默认播放顺序为最后一个录制音频为当前录音播放,在此状态可以通过上一曲"Ⅰ4("键或下一曲")→)"来选择录音播放文件。

#### 无线蓝牙操作说明:

第一步:先将主机开机,按"M"键切换到蓝牙模式;主机提示"蓝牙已准 备好正在等待配对"同时蓝色显示灯快速闪烁。

第二步:打开手机,进入手机的"设置"菜单,找到蓝牙功能选项,打开手机的蓝牙功能,点"扫描"按钮,待搜索到"S93"点击"S93"连接即可。 第三步:连接成功后,主机提示"蓝牙已配对",蓝色显示灯停止闪烁即可

第二少·注按成功后,主机旋示 盖才已配对,盖已亚小刀停止内网 通过主机播放手机教学教材、培训资料、歌曲播放等。

 <u> </u>

# -----

# 为主机充电:

当主机低电时,请先将主机电源开关关闭,关机状态充电,请用原厂标配 电源适配器接上220V插座进行充电,充电时电量指示灯会逐个闪烁,充 满电后电量指示灯3个红灯长亮。

#### 意:

a.在工作时,当主机第三个红色指示灯快速闪烁时或提示"电池电量低 请及时充电"表示电池低电,请及时充电;本机充电时间约3-4/\时充满; b.第一次使用主机时,电池有小部份电量,但是为了达到最好的效果,建 议先充满电质使用。

# UHF头戴式无线麦克风配对及使用方法:(仅限无线版)



## UHF头戴式无线麦克风开/关机:

将开关拨至"ON"状态,指示灯蓝灯长亮表示头戴已开机。 将开关拨至"OFF"状态,指示灯蓝灯熄灭,表示头戴麦已关机。

# UHF头戴式无线麦克风手动配对:(此操作方法运用于麦克风无声时手动配对)

- 第一步:打开主机切换到无线模式,长按"M"键3秒,主机提示UHF等待 配对表示已进入UHF无线配对状态;
- 第二步:再打开头戴式无线麦克风,长按"令"一键配对键3秒,就可以重 新配对无线麦克风,配对成功后蓝色指示灯停止闪烁,可开始试

#### 注意:

讲话。

在UHF无线扩音使用过程中长按" 令"一键配对键为断开UHF无线扩音 连接,需要再次使用UHF无线扩音时要重新依照以上方法进行配对频 点;在UHF无线扩音状态下,短按"+"键为单格音量加,短按"-"键为单格 音量减。

#### 为头戴麦克风充电:

当无线麦克风蓝色指示灯不停的闪烁时,表示无线麦克风电池低电,请 将开关推至"OFF"状态关闭无线麦克风,再将无线麦克风OC5V接口连 接数据线麦口USB接头,另一端数据线USB接头与DC5V的USB电源接 口连接;充电时无线麦克风红色指示灯长亮,充满电后红色指示灯熄灭。 充电时间约3-5小时充满,充电完成后请及时拔掉充电插座断开电网电 源。

#### TF/USB flash drive:

The speaker will automatically play the music file after insert TF card/USB flash drive, and the previous song and the next song can be selected by short press the "Iet" or " HI" button.

#### Loop:

Loop: When play music on TF card/USB flash drive, long press "M" key for 3 seconds to switch to single song repeat. Long press it again to switch back to all repeat. Notes: speaker will be "all repeat" by default after powered on next time.

#### Recording:

Connect the microphone, make sure the USB flash disk or TF card has been inserted, long press " • " key to record; short press " • " key again to stop recording, it will automatically play the present recording files.The recording files will be saved automatically into the USB flash disk or TF card.

Play recording: Insert an USB flash drive or TF card with recording file, short press " • " key to play in MP3 playing mode, it will play the latest recording. You could short press the "i+4" or " i+1" button to select the recording.

## Bluetooth Instruction:

Please pair with your Bluetooth device as follows: 1.Switch on the amplifier and press "M" to enter into Bluetooth mode. The Bluetooth mode is ready with voice prompt "Bluetooth is waiting for connection", the blue light indicator will flashing.

2.Turn on the Bluetooth function of your mobile phone and search "S93". Click and it will be connected successfully with a voice prompt "Bluetooth is connected", the blue light indicator will stop flashing. When playing music, please keep the amplifier close to the

Bluetooth-enable device to maintain a stable connection.



#### Charging the device:

1.Please power off speaker when charging, please use the standard adapter, the other end connects with the power supply AC 110~220V to charge. Please unplug the adapter timely after fully charged ( the charging time is normally 3-4 hours ).

2.Battery status: There are 3 red light battery indicators, the third red light indicator flash means low power, please charge it timely when the speaker reminds with voice prompt "Low battery, please charge". The 3 red light indicators will flashing one by one when charging and they will stop blinking and keep on all time after fully charged.

3.Please charge it 1~2 hours more after fully charged to lengthen the life of battery. Please don't over charge too much time.

4.Please charge the battery within 48 hours if the battery is too low. Keep the speaker with power if not use.

Wireless Microphone Operation: (limited to wireless version)



The wireless microphone factory setting have been paired successfully, you can use it directly. If the microphone has no sound or the microphone is disconnected, you need to manually pair it.

## Pair the UHF manually:

Step1: Turn on the amplifier and switch to UHF mode, long press the "M" key to enter into UHF wireless pairing status, a voice prompt will say, "UHF is waiting for connection". Step2: Turn on the wireless microphone and long press " 중 " key for 5 seconds, a voice prompt will say, "UHF is connected".

#### Volume Control:

If amplifier howling or in a small volume, adjust the volume by press "+" or "-" on the wireless microphone.
 You can also adjust the volume on the voice amplifier by rotate the volume control.

#### How to charge the wireless microphone:

When the microphone blue indicator light flashes means low battery. Please turn it off and charging through Micro USB with DC 5V adapter. The red indicator light will be on all the time when charging, and it will go out after fully charged.

#### Notes:

1.The normal charge time is 3~5 hours. Unplug the charger as soon as it is fully charged.

 Pull charge before first use of the microphone to ensure best results.

3.Turn off the UHF wireless microphone when not in use.

#### 产品使用注意事项:

- 为了达到话筒扩音最佳效果,请将咪头放置嘴正面前方1-2CM 处对准咪头处发音,若有啸叫,可适当调小音量或将机器与咪 头的距离稍微拉开,以防互相干扰;
- 2、尽量避免频繁拔插麦克风插口,以免造成插口松动而引起接触 不良,不可将话筒和音源插错;
- 3、为保证锂电池使用寿命,建议使用完再充电,频繁充电将加速 电池芯片老化,长时间不用时应每隔两个月充一次电;
- 4、因喇叭磁性较强,不可将机器和银行卡等带磁性的东西放一起, 以免造成失磁而带来不必要的麻烦;
- 5、本产品所有配件皆按本机工作需要设计,如需更换配件尽量使 用本公司原装配件,以达到最佳工作状态;
- 6、本产品在充电和正常使用过程中可能会轻微变热,这属于正常现象;
- 7、请使用抗静电软布来清洁擦拭本产品,在清洁本产品时请先关闭电源开关,并断开所有外部连接。请勿用化学物质擦拭(如: 酒糖, 苯等化学洗剂或有磨砂性的清洁擦拭剂):
- 8、请勿摔落、抛掷或者踩踏本产品,请勿擅自拆解本产品,否则 不能享受本公司的免费保修服务。

## 常见问题的自我解决:

- 1、开关开启,扩音器没有声音
- A、显示灯不亮 , 电池没电 , 充电解决 ;
- B、检查话筒是否插错位置。
- 2、扩音器有明显啸叫
- A、正确配戴话筒,将麦头记号处对准嘴角方向,麦克风与主机 保持60-70CM距离;
- B、空间变小时应适当调低音量以减少回声造成啸叫。

#### 产品保修须知:

为了让您更好的享受我公司的各项服务,请详细阅读以 下内容:十度数码科技产品的保修服务由全国各地的十度数 码授权技术服务中心负责提供。本产品自销售之日起计保修 期和"三包"有效期,在"三包"有效期内。正常状态下使 用本产品而发生故障,可依据"三包"规定予以维修、更换、 退货。在产品保修期内,可依照本保修条款的内容,在十度 数码授权技术服务中心享受无偿维修服务(随机附件不在保 修范围内)。本品保修期限规定为一年。

在保修期(含"三包"有效期)内以下情况将实施有偿 维修服务,同时不享受"三包"服务:

- 1) 不能出示有效保修卡原件和有效发票。
- 2)购买产品日期、销售单位名称(盖章有效)等项目未能完 整填写或涂改保修卡。
- 3)由于不可抗拒的自然灾害造成的故障、损伤。
- 4)在运输、搬卸过程中造成的故障、损伤。
- 5)由于未能按照《产品使用说明书》上所写的使用方法和注 意事项操作而造成的人为故障。
- 6)未经本公司授权地进行的产品拆卸、维修、改装而造成的 故障。

需要保修时请将机器与本保修卡(原件)及购机凭证(复 印件)一起送往十度数码科技有限公司授权技术服务中心, 运输费由用户承担。

#### Trouble shooting:

# 1.Turn on the power switch, but the amplifier has no sound.

A. The indicator is not light: it means no power and you should charge the amplifier.

B.Turn the volume up on the voice amplifier, and also on the microphone.

# 2.Talk to the wireless microphone, but the amplifier has no sound.

A.Please confirm both voice amplifier and microphone is power on.

B.Please confirm whether the wireless microphone has been paired with the amplifier successfully or not. Pair the UHF manually again if necessary.

### 3. The voice amplifier has distinct howling.

A.Please make sure that the microphone is not pointed at the amplifier and not too close to the amplifier. B.In a small room, please turn down the volume properly to avoid howling.

#### SHIDU Guarantee:

100% SHIDU Guaranteed Product Satisfaction. We promise 1 year warranty. If you have any questions, please feel free to contact us, we will try our best to provide you the best service. www.10shidu.com Email:info@10shidu.com

#### 注意:

本手册描述的产品及其附件的某些特征和功能,仅供参考。 十度数码科技保留随时修改本手册中任何信息的权利,无需进 行任何提前通知且不承担任何责任。

#### 无担保声明:

本手册中的内容,除非适用法律要求,十度数码科技对本手册 中的所有内容不提供任何明示或暗示的保证。 在法律允许的范围内,十度数码科技在任何情况下,都不对因 使用本手册相关内容而产生的任何特殊的、附带的、间接的、 继发性的损害进行赔偿,也不对任何利润、数据、商誉或可预 期的损失进行赔偿。

#### 进出口管制

若需将此产品手册中描述的产品出口、再出口、或者进口,您 应遵守适用的进出口管制法律法规。