

注意:

本手册描述的产品及其附件的某些特征和功能,仅供参考。

十度数码科技保留随时修改本手册中任何信息的权利,无需进行任何提前通知且不承担任何责任。

无担保声明:

本手册中的内容,除非适用法律要求,十度数码科技对本手册中的所有内容不提供任何明示或暗示的保证。

在法律允许的范围内,十度数码科技在任何情况下,都不对因使用本手册相关内容而产生的任何特殊的、附带的、间接的、继发性的损害进行赔偿,也不对任何利润、数据、商誉或预期的损失进行赔偿。

进出口管制:

若需将此产品手册中描述的产品出口、再出口、或者进口,您应遵守适用的进出口管制法律法规。

深圳市十度数码科技有限公司

Shenzhen SHIDU Digital Co., Ltd

4008 939 488

WWW.SHIDU.COM

10

感谢您使用十度原声扩音器

关注十度微信公众号

回复型号“M800”

获取设备使用教程

10°

十度音响

扩音器

使用说明书

USER MANUAL

安全警告:

1. 请勿将产品及配件靠近火源或任何过热的环境中。

2. 请勿将产品及配件接触水及湿气,不要在靠近水的地方使用本设备,也不要将产品浸入任何液体中,避免产品及配件受到水滴或水溅。

3. 请勿自行打开或任意拆解、维修电路组件,如果电池更换不当会有爆炸危险,严禁将电池投入火、火中或靠近任何过热的环境中。

4. 本产品由外接电源适配器(5V 1.5A 电源)充电后使用,充电后可方便的通过拔掉电源适配器插头断开电网电源。

5. 当用户暂不使用本产品时,请将产品电源开关旋转至关闭状态关闭电源(参见产品操作示意图),避免电池电量的流失。

6. 当禁止使用无线设备或设备的使用会引起电子设备的干扰与安全隐患时,请关闭本产品。

7. 在易燃易爆区域,请关闭本产品,并遵守相关标示说明,以免引起爆炸或火灾。易燃易爆区域包括但不限于:加油站、易燃或化工制品运输及储存设施、有爆炸危险标志的区域,有“关掉双向无线电设备”标志的区域。

8. 乘坐飞机时,请遵守航空公司有关规定和条例,在飞机起飞前关闭本产品,以免造成安全隐患。

9. 仅适用于非热带气候条件下安全使用,仅适用于海拔2000米以下地区安全使用。

主要功能特点:

1.匠心设计,双色注塑工艺,支持IPX5级生活防水

2.十度原声扩音系统,扩音清晰响亮

3.配备蓝牙5.0云控,支持网络同步素材播放

4.大容量3.7V 4400mAh锂离子电池

5.支持TF卡、U盘播放

数据参数:

输出功率	峰值18W	频率响应	80Hz-18KHz
喇叭阻抗	4Ω	工作温度	-10°C-45°C
充电电压	DC 5V±0.5A	使用扩音时间	6-8小时
使用音乐时间	6-8小时	充电时间	3-5小时

注意:因本机为大功率扩音器,在小面积教室或会场使用时好,请在插入麦克风前将音量调节至最小位置,以免声压过大,造成回声、啸叫,插入麦克风后根据自己所在的场地面积进行音量微调,达到最佳扩音效果。

主机操作示意图:

1.开关机/播放暂停

a.长按“M”键3秒为开关机;

b.在播放状态下短按“M”键为暂停,再次短按“M”键为播放。

2.上一曲/音量减:在音乐模式下长按“◀”键为上一曲,短按“◀”键为音量减。

3.下一曲/音量加:在音乐模式下长按“▶”键为下一曲,短按“▶”键为音量加。

4.模式切换键:可通短按“M”键进行模式切换,蓝牙模式、U盘模式、TF卡模式、AUX模式、UHF模式(此切换仅适用于UHF无线版)。

5.一键录音

2.电源开关/播放暂停:

①长按“M”键3秒为开关机;

②在播放状态下短按“M”键为暂停,再次短按“M”键为播放。

3.循环播放:

在MP3播放模式下长按“M”键3秒,主机提示单曲循环播放;再次长按“M”键3秒,主机提示全部循环播放模式。

注意:机器关机后,下次开机时系统将自动默认为全部循环播放模式。

4.录音:

支持有线麦克风录音:在插入U盘或TF卡状态下,并将有线麦克风插入“MIC”话筒接口,短按“#”键主机提示开始录音表示开始录音;在录音模式,再次短按“#”键,主机提示播放录音,表示播放当前录音。

播放录音:在MP3播放模式下长按“#”键,即可播放录音文件。

5.音频输入:

将机器通过音频线与电脑、手机、MP3/MP4等外接音源连接后,主机提示音频输入模式,即可直接播放上述外接音源。

6.主机充电:

在使用过程中,当主机提示电池电量低时,请及时充电。将DC5V充电接头连接主机DC5V插口,再接取电源(220V)插座充电。充电时主机屏幕数字会随电量的增加而增加,本机适用各类手机电源适配器充电后使用,产品自带充电线。

6.MIC话筒接口(UHF无线版标配不含有线麦克风)

7.DC5V充电口

8.AUX音频输入

9.TF卡插槽

10.USB插口(仅传输数据,读取U盘)

11.数码显示屏(支持电量显示)

注意:

①第一次使用主机时,电池有小部分电量,为了达到最好的效果,建议先充满电再使用;

②充电后可方便的通过拔掉电源适配器电源插头断开电网电源。

7.移动电源:

取出随机配备的充电线,一端连接主机USB接口,另一端连接手机的充电接口,即可为手机充电。

8.无线蓝牙使用说明:

将机器通过音频线与电脑、手机、MP3/MP4等外接音源连接后,主机提示音频输入模式,即可直接播放上述外接音源。

UHF无线麦克风:(仅限UHF无线版)

UHF多媒体无线扩音器使用方法:(此功能仅限UHF无线版使用)

①UHF无线版在开机后自动默认为UHF无线扩音模式,打开主机电源开关,同时取出随机配备的UHF头戴式无线麦克风,打开头戴式无线麦克风,即可实现无线扩音。

注:若出现扩音无声,可按如下步骤重新手动配对UHF功能插点,即可实现UHF无线扩音。

②UHF功能插点手动配对

配对方式:先打开主机,进入手机的“设置”菜单,找到蓝牙功能选项,打开手机的蓝牙功能,点“扫描”按钮,待搜索到“SD-M800”,点击“SD-M800”连接即可;同时主机会提示蓝牙配对成功。

第三步:配对成功后,即可通过主机播放手机教学教材、培训资料、歌曲播放等,同时也可与无线麦克风配合使用,实现诗朗诵配乐、同步K歌等功能。

产品保修须知:

为了让您更好的享受我公司的各项服务,请详细阅读以下内容:十度数码科技产品的保修服务由全国各地的十度数码授权技术服务中心负责提供。本产品自销售之日起计保修期和“三包”有效期,在“三包”有效期内,正常状态下使用本产品而发生故障,可依据“三包”规定予以维修、更换、退货。在产品保修期内,可依照本保修条款的内容,在十度数码授权技术服务中心享受无偿维修服务(随机附件不在保修范围内)。本品保修期限规定为一年。

在保修期(含“三包”有效期)内以下情况将实施有偿维修服务,同时不享受“三包”服务:

1)不能出示有效保修卡原件和有发票。

2)购买产品日期、销售单位名称(盖章有效)等项目未能完整填写或涂改保修卡。

3)由于不可抗拒的自然灾害造成的故障、损伤。

4)在运输、装卸过程中造成的故障、损伤。

5)由于未能按照《产品使用说明书》上所写的使用方法和注意事项项操作而造成的人为故障。

6)未经本公司授权地进行的產品拆卸、维修、改装而造成的故障。

需要保修时请将机器与本保修卡(原件)及购机凭证(复印件)一起送往十度数码科技有限公司授权技术服务中心,运输费由用户承担。

产品保修卡

购买产品时,请认真填写此卡,并予以妥善保存。

用户档案

用户姓名	
性别	
通讯地址	
邮编	
联系电话	
购买地点	
购买日期	
品名及规格	
销售单号	
机身编号	
经销商签名	
用户签名	

经销商盖章处

Please read the instructions carefully before using it.

Note:

Before turn on the amplifier, ensure that the MIC don't point at the amplifier, this will eliminate any annoyance associated with howling. For ensure better amplification, aim at the headset MIC capsule when speaking, and keep the distance between the voice amplifier and the MIC more than 60 cm to avoid howling.

Simply tucking the speaker around waist, and mounting headphone over head can help to achieve the required distance.

Features:

1.Two-color injection molding, IPX5 waterproof;

2.SHIDU acoustic amplification electroacoustic system with loud and clear voice;

3.Support Bluetooth to play music;

4.High-capacity 3.7V 4400mAh lithium-ion battery;

5.Support TF card & USB flash drive play;

Specification:

Max output power:	18W	Frequency response:	80Hz-18KHz
Output Impedance:	4Ω	Work temperature:	-10°C-45°C
Charging voltage:	DC 5V 1.5A	Amplify time:	6-8 hours
Music-play time:	6-8 hours	Charging time:	3-5 hours

Function Illustration:

1.Power switch / play & pause:

A.Long press “M” button for 3 seconds to turn on/off.

B.In music playing mode, short press it to pause, short press it again to play.

2.Previous/Volume ◀: In music playing mode, long press for previous song,short press for volume down.

3.Next/Volume ▶: In music playing mode,long press for next song,short press for volume up.

4.Mode Key: Short press “M” to select a working mode: Bluetooth, USB flash drive, TF card, AUX, UHF (only suitable for UHF version).

5.Recording

6.0.3.5mm Microphone Jack: Insert the wired microphone in any mode to amplify with current mode simultaneously. To avoid howling please do not point the microphone toward the speaker. (There is no wired MIC in wireless version.)

7.DC 5V charging port

8.Audio Input: Connecting with the computer phone/MP3/MP4 and other Audio device, short press “M” to switch to the Audio In mode that can play all above audio files directly.

9.TF card slot: Insert the TF card to play mp3. It is compatible with most brands, the maximum capacity is 32GB.

Note: It may be unreadable when the file is large or complex.

10.USB flash drive slot: Insert the USB flash drive to play mp3. It is compatible with most brands, the max capacity is 32GB.

Note: It may be unreadable when the file is large or complex.

11.LED screen (Only displays the battery level.)

1.TF card/USB flash drive

The speaker will play the music file automatically after inserting TF card/USB flash drive to the right port, and the previous song and the next song can be selected by long press the “◀” or “▶” button. In music playing mode, short press “M” button to play/pause the music.

2.Mode Key: Short press “M” to select a working mode: Bluetooth, USB flash drive, TF card, AUX, UHF (only suitable for UHF version).

3.Recording

Please pair with your Bluetooth device as follows:

1.Switch on the amplifier and press “M” key to enter into the Bluetooth mode.(The Bluetooth mode is ready with voice prompt “Bluetooth is waiting for connection”

2.Turn on the Bluetooth function of your mobile phone and search “SD-M800”. Click and it will be connected successfully with a voice prompt “Bluetooth is connected”.

Note: When playing music,please keep the amplifier close to the Bluetooth device to maintain a stable connection.

4.Power bank:

Connecting with the speaker and mobile via charging cable, then you can charge for the mobile phone.

6.Charge the speaker

Please turn off the speaker and charge it in time when it's low battery with voice prompt “Low battery, please charge”. Please charge the speaker through Type-C charging cable with DC 5V adaptor.

Notes:

1.We suggest full charge the speaker when you use the speaker in the first time.

2.Please unplug the charger in time after it is fully charged.

UHF wireless microphone instructions: (only for UHF wireless version)

The wireless microphone is pre-paired with the amplifier already, you can use it directly. However, if the microphone has no sound or the microphone is disconnected, you need to pair it manually.

1.Pair the UHF manually:

Step 1: Turn on the voice amplifier, short press “M” key to switch to UHF mode, long press “M” key for 3 seconds, amplifier comes a voice prompt “UHF is waiting for connection”

Step 2: Turn on the wireless microphone and long press “#” key for 5 seconds, pairing is successful with a voice prompt “UHF is connected”.

2.Volume Control:

1)If amplifier howling or in a small volume, adjust the volume by press “+” or “-” on the wireless microphone.

2)You can also adjust the volume on the voice amplifier by short press “◀” or “▶”.

3.How to charge the wireless microphone:

When the microphone's a blue indicator light flashes, battery is low. Please turn it off and charge through type-c charging cable with DC 5V adaptor. The red indicator light will be on all the time when charging, and it will turn off when the mic is fully charged.

Notes:

1.The normal charge time is 3-5 hours, please unplug the charger as soon as it is fully charged.

2.Full charged before first use of the microphone to ensure best results.

3. Turn off the UHF wireless microphone when not in use.

Trouble shooting:

1. Turn on the power switch, but the amplifier has no sound.

A. The indicator light is off: it means no power and you should charge the amplifier.

B. The indicator light is on:Please repair the speaker and microphone.(Reference manually re-pair operation for details)

C.No response after any operation: please press and hold “M” for 10s to reset the speaker and power it on again.

2. Talk to the wireless microphone, but the amplifier has no sound(for wireless version only).

A. Please confirm both voice amplifier and microphone are powered on.

B. Confirm the wireless microphone has been paired with the amplifier successfully.

Please pair the UHF manually again if necessary.

3. The voice amplifier has distinct howling.

A. Make sure the microphone is not close to the amplifier,keep 60-70cm distance when in use;

B. You may need to turn down the volume properly to avoid howling when you use it in the small room.

SHIDU After sales service:

If you have any questions, please feel free to contact us, we will try our best to provide best service.

www.10shidu.com Email: service@10shidu.com