

SOUND OF CHANGE®
让改变发声

深圳市十度数码科技有限公司
Shenzhen SHIDU Digital Co.,Ltd

地址:深圳市宝安区新和新兴工业园2区A8栋十度科技园
电话:0755·21635866 传真:0755·29105099

全国统一
服务热线 4008 939 488
官方网址 WWW.10SHIDU.COM



本说明书所示产品图片及文字功能已经详细核对,如出现印刷错漏,本公司不承担因此产生的后果,产品图片及详细功能参数请以实物为准。SHIDU十度商标及LOGO均已注册,受知识产权保护,未经本公司允许不得仿冒,违者必究。


本公司保留对产品更正改进的权利,届时恕不另行通知,在法律允许范围内,最终解释权归深圳市十度数码科技有限公司所有。



原声手提音响
使用说明书
USER MANUAL

十度原声  天籁之音

黑金刚H9
原声手提音响

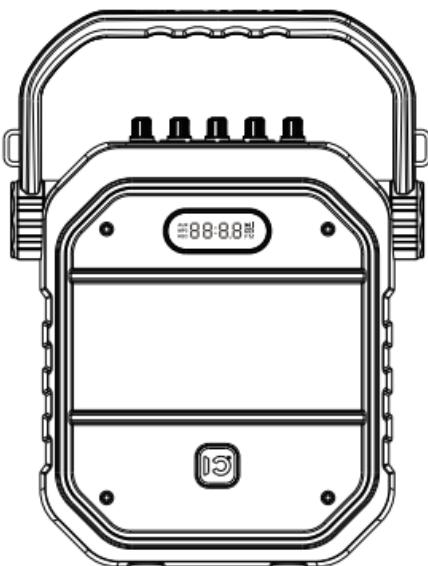

本机内置A品动力电池,本厂予以承诺电池保用3年

尊敬的用户：

您好！

欢迎您使用SHIDU十度数码产品！

SHIDU十度数码产品将以高科技的品质和优良的服务进入您的工作和生活，您一旦拥有，就会真切地感受到它的卓越性能和优良品质，让您时刻都能享受到生活的轻松愉快。为了能让您更好的体验十度数码的精工品质，请您在使用本产品前，认真阅读本说明书。如有不解之处，您可向本公司客服咨询。

无担保申明：

本手册中的内容，除非适用法律要求，十度数码科技对本手册中的所有内容不提供任何明示或暗示的保证。

在法律允许的范围内，十度数码科技在任何情况下，都不对因使用本手册相关内容而产生的任何特殊的、附带的、间接的、继发性的损害进行赔偿，也不对任何利润、数据、商誉或可预期的损失进行赔偿。

进出口管制：

若需将此产品手册中描述的产品出口、再出口或者进口，您应遵守适用的进出口管制法律法规。

安全警告：


- 1.请勿将产品及配件靠近火源或任何过热的环境中。
- 2.请勿将产品及配件接触水及湿气，不要在靠近水的地方使用本设备，也不要将产品浸入任何液体中，避免产品及配件受到水滴或水溅。
- 3.请勿自行打开或任意拆解、维修电池组件，如果电池更换不当会有爆炸危险，严禁将电池投入水、火中或靠近任何过热的环境中。
- 4.本产品由外接电源适配器（DC 15V=2A）充电后使用，充完电后可方便的通过拔掉电源适配器插头断开电网电源。
- 5.当用户暂不使用本产品时，请将产品“电源开关”关闭（参见产品操控示意图），避免电池电量的流失。
- 6.当禁止使用无线设备或设备的使用会引起电子设备的干扰与安全隐患时，请关闭本产品。
- 7.在易燃易爆区域，请关闭本产品，并遵守相关标示说明，以免引起爆炸或火灾。易燃易爆区域包括但不限于：加油站、易燃或化工制品运输及存储设施、有爆炸危险标志的区域，有“关掉双向无线电设备”标志的区域。
- 8.乘坐飞机时，请遵守航空公司有关规定和条例，在飞机起飞前关闭本产品，以免造成安全隐患。
- 9.电源线不能被挤压、拉扯、弯曲、打结、悬挂重物或被人践踏。以防止电源线的绝缘层被损坏导致触电。
- 10.如机器发生冒烟或其他异常现象，请迅速拔出电源插头，避免引起意外事故，并联系当地经销商进行维修。
- 11.仅适用于非热带气候条件下安全使用，仅适用于海拔2000米以下地区安全使用。

产品特性：

- 1.十度原声K歌音箱，40W大功率，支持手提；
- 2.配置6.5寸 80磁全频喇叭；
- 3.12V 2500mAh电池 动力电芯；
- 4.配置独立音频输入、输出功能；
- 5.支持FM收音功能，TF卡、U盘播放功能；
- 6.话筒采用UHF无线穿墙技术，高灵敏度动圈咪芯，信号稳定，音质清晰。

面板功能说明：

- 01.电源开关：长按“”键3秒开机语音提示后，显示屏常亮表示正常开机，再次长按3秒显示屏熄灭表示已关机。
- 02.输入选择：短按此按键可进行菜单选择，用来切换音频输入模式、蓝牙模式、U盘播放、TF卡播放、UHF模式。
- 03.录音/播放按键 04.上一曲按键 05.播放暂停按键 06.下一曲按键 07.一键蓝牙
- 08.循环键：在音乐播放模式短按“”键显示屏显示ONE为单曲循环，再次短按“”键显示屏显示ALL为全部循环。
- 09.数字选取键
- 10.音乐音量：可调节音乐播放声音大小。
- 11.音乐高音：可调节音乐播放高音，使音乐更动听。
- 12.音乐低音：可调节音乐播放低音，使音乐更动听。
- 13.混响调节：可调节话筒混响，使话筒效果更佳。
- 14.话筒音量：可调节话筒音量大小，使话筒声音合适。

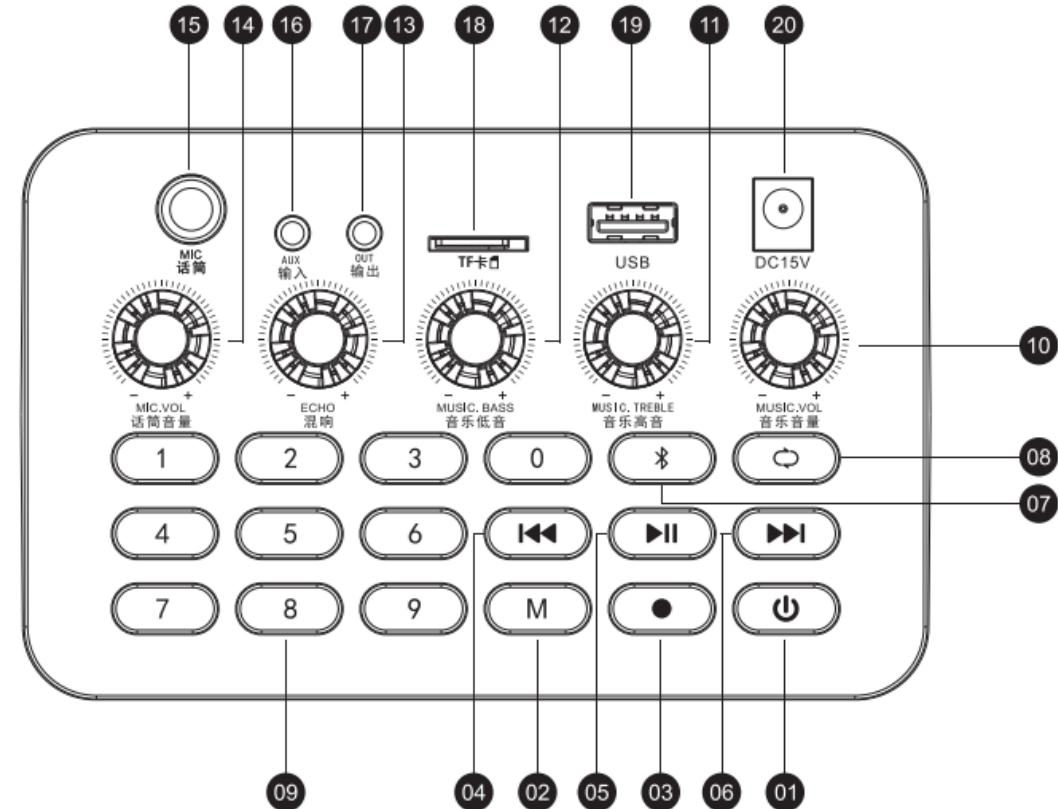

15.话筒插口: 本机支持有线话筒输入(标配不含有线话筒)。

16.音频输入接口

17.音频输出接口

18.TF卡接口

19.USB接口 (仅限数据传输读取U盘)

20.DC 15V输入口: 本音箱设备充电输入口,请使用原厂标配充电器为本机充电。

音乐播放功能说明:

01.本机U盘、TF卡插口,支持即插即用,支持MP3、WAV、WMA、FLAC和APE音乐格式播放、解码音质表现突出高保真立体音设计给你全新的音乐体验。

02.播放/暂停按键: 在播放状态时,短按“**▶||**”键可暂停播放歌曲,再次短按“**▶||**”键即可继续播放。

03.上一曲/下一曲按键: 在音乐播放模式下,短按“**◀◀**”或“**▶▶**”可以进行播放列表上下选取。

录音功能说明:

01.连接话筒,在任意模式下插入外接存储器(U盘或是TF卡),长按录音键“**●**”进入录音模式开始录音,录音完成后短按录音键“**●**”保存并开始播放录音。


02.在音乐播放模式下,如果外接存储器里有录音文件,按录音键“**●**”进入播放录音状态,默认播放顺序为最后一个录音文件播放,在此状态可以通过上一曲“**◀◀**”键或下一曲“**▶▶**”来选择录音播放文件。

蓝牙功能操作说明:

第一步: 开机按“M”键切换到蓝牙模式显示屏上显示“BLUE”时为蓝牙模式

第二步: 打开手机,进入手机的“设置”菜单,找到蓝牙功能选项,打开手机的蓝牙功能,点“扫描”按钮,待搜索到“H9”连接即可;连接成功蓝牙图标停止闪烁。

第三步: 配对成功后,即可通过H9播放手机教学教材、培训资料、歌曲播放等。同时也可与无线麦克风配合使用,实现诗歌朗诵,通过手机K歌软件实现同步K歌等功能。

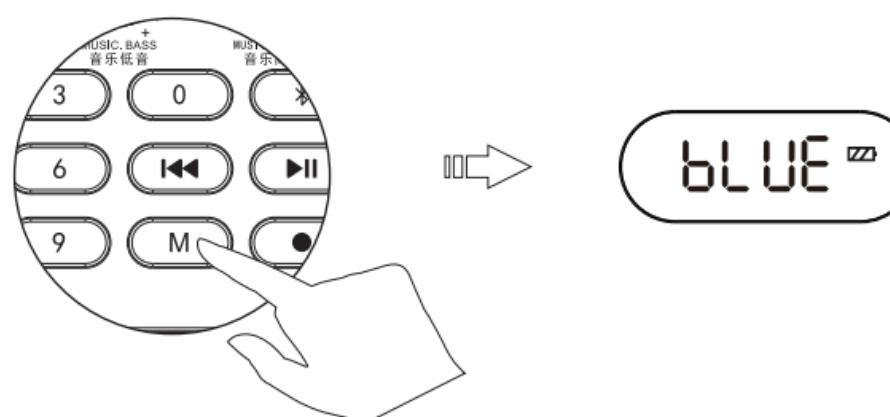


FM收音：

在开机状态下，短按“M”键调整至FM收音模式，此时屏幕显示FM电台频率；

再长按“**▶II**”键进入自动搜台模式，自动搜台完毕后，主机会自动保存搜索到的广播频道，可通过短按“**◀◀**”或是“**▶▶**”键选择储存的FM频道播放。

为主机充电：


当主机低电时，请先将主机电源开关关闭，关机状态充电，请用原厂标配电源适配器接上220V插座进行充电，充电时电量指示图标闪烁，充满电后电池图标长亮。

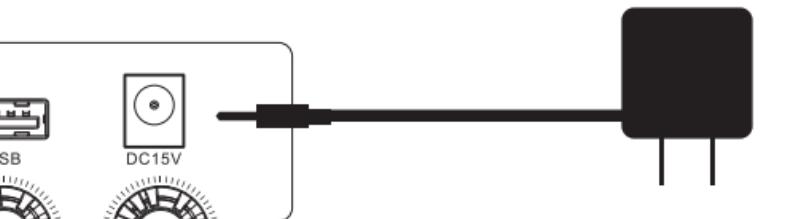

注意：

- a.在工作时，屏幕电量指示图标不停的闪烁，表示电力不足，请及时充电；本机充电时间约3-4小时充满；
- b.第一次使用主机时，电池有小部份电量，但是为了达到最好的效果，建议先充满电再使用；

遥控功能说明：

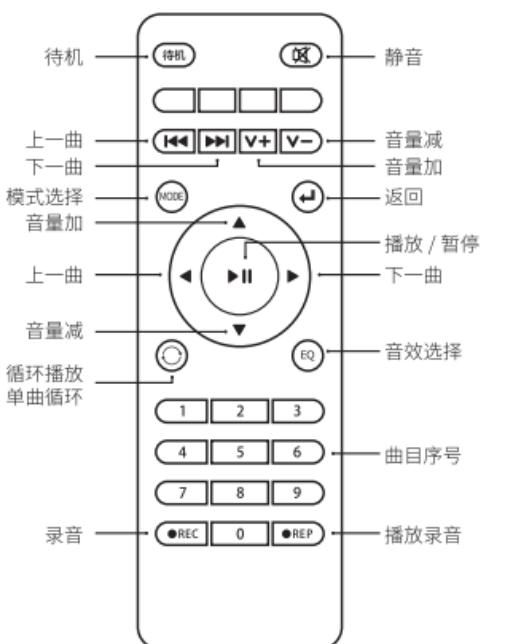

01.在正常情况下，遥控器应遥控接收窗前约6米、30度范围内使用。


02.操作遥控器时，将遥控器对准机器的遥控窗口，遥控器与机器之间不应有障碍物。

03.如果遥控接收器处于直接接收强光照射的位置遥控器可能失效。在此情况下，请将机器移开，以避免直接照射。

04.避免新旧电池混合使用，定期检查遥控器电池是否更换。

注：说明书为示意图，具体以实物为准。

无线话筒功能说明:

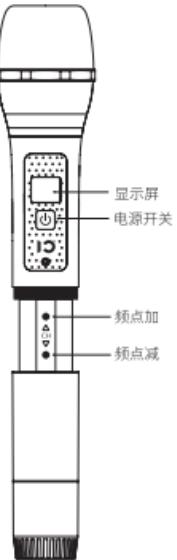

UHF无线话筒开/关机:

长按“”键开机，屏幕显示默认频点值，打开主机即可实现UHF无线扩音；
在开机状态下，长按“”电源开关键，屏幕熄灭表示话筒已关机；

UHF无线话筒手动配对：(此操作方法运用于话筒无声时手动配对)

打开主机切换到UHF模式，长按“M”键3秒，UHF闪烁表示已进入UHF无线配对状态；
将手持式UHF无线话筒开机，显示当前的频点，快速短按开机键3次当前频点闪烁，表示无线话筒与机器已手动配对成功；第二支话筒再次长按“M”键3秒，UHF闪烁表示已进入UHF无线配对状态，将手持式UHF无线话筒开机，显示当前的频点，快速短按开机键3次当前频点闪烁，表示第二支无线话筒与机器已手动配对成功；即可实现双无线扩音。

UHF无线话筒电量说明:

在使用过程中，手持式UHF无线麦克风显示屏电量提示符为“”满格时，表示电量充足；当显示屏电量提示符为“”空格时，表示电池低电，请及时更换电池。

注：正确打开电池盒，装入电池，注意电池的正负极不要装反。

主要技术规格:

额定功率: ----- ≤40W

灵敏度: ----- 550±30mV

信噪比: ----- ≥80dB

频响: ----- 80Hz-18KHz

输入规格: ----- DC 15V=2A


以上规格为样机技术规格，仅供参考。本产品不断改进，设计规格的功能可能有所更改，恕不另行通知。



中华人民共和国电器产品
国家强制认证安全标志



仅适用于非热带气候
条件下安全使用



仅适用于海拔 2000 米
以下地区安全使用

故障自我检查：

用户在使用本机过程中，如发现有问题，请按下面的故障检修表逐一检查。仍然不能解决问题，请找本公司在当地的经销商或拨打本公司的客服热线咨询。故障检修表具体详见下表所示：

故障现象	可能原因	处置方法
打开电源无任何声音	1、主机没电 2、没有输入音源 3、音量调节处于最小位置	1、给主机充电后检查显示屏是否点亮正常开机 2、重新检查设置音频输入信号 3、适当调节音量
声音失真	1、音量调节过大 2、音响可能损坏	1、将主音量调小 2、检查音箱是否损坏，若损坏，需维修
卡拉OK无声	1、话筒插头没有完全插入 2、话筒开关没有打开 3、话筒音量旋钮处于最小位置 4、UHF无线已断开或者无线话筒电池电量不足	1、把话筒插头完全插入话筒插口 2、打开话筒开关 3、适当调节话筒音量 4、重新手动配对 UHF 无线话筒，或者更新话筒电池
MP3 无声	1、U 盘歌曲格式不对 2、操作不当引起程序混乱 3、U 盘 /TF 卡没有插好	1、将歌曲格式转成 MP3 格式 2、开机重新启动机器 3、插好U盘/TF卡
充电后仅能使用几分钟或连接适配器时才能使用	1、电池损坏 2、电池连接线松 / 断 3、未将电量充足	1、更换同型号的电池 2、找本公司当地经销商服务 3、将电量充足后再使用

售后服务条例：

一、本公司提供的售后服务方式：

1、咨询服务：用户在使用产品前，请仔细阅读本产品的使用说明书。在使用过程中遇到问题，均可与当地经销商联系，或致电十度全国统一客服热线: **4008 939 488**

2、包换服务：包换期内（自购机之日起7天内），正常使用出现非人为故障，请保持产品、配件和包装的外观与完整（若外观损坏，作保修处理），经检测确认故障后，可选择换货或修理，用户可到当地十度委托经销商联系处理。

3、保修服务：保修期内，正常使用出现了非人为故障，均可享受免费保修服务（主机一年内免费保修，若人为损坏，作收费维修处理）。

4、收费维修服务：产品在购机之日起一年到三年内，出现故障可收费维修，用户需要支付维修所需的元件费、运输费和合理的维修人工费。

5.以下情况不在三包范围内，本公司可提供有偿服务：

(1)、超过三包期限；
(2)、意外因素或人为行为导致的产品损坏（如：未按使用说明书操作、维护或保管，错误安装造成的故障，接入不合适的电源，进水、渗油、摔坏等）；

(3)、无有效三包凭证；
(4)、因不可抗力如地震、火灾、水灾、雷击等导致的产品故障或损失；
(5)、未经本公司许可，擅自拆卸、修理或改装；
(6)、在运输、搬卸过程中造成故障、损伤。

二、关于售后服务的说明：

- 1、购机日期以本凭证为准，不能有效证明的，以生产日期为准；
- 2、质量问题不包括用户个人对音质、音色等主观异议，不作为退换货的条件；
- 3、配件、外壳、说明书、包装不在保修服务范围内；
- 4、对已停产型号产品的服务，本公司仅做功能性修复（外观可能与原产品有异）；
- 5、经销商向您做出的非本公司保证的其他承诺，本公司不承担任何责任；
- 6、用户在接受服务之前，请将重要资料另行备份或记录，因维修或其他任何原因造成的任何损失，本公司概不负责。因保管不善等原因将机内资料泄露给第三者所造成的损失（如：银行账号、密码、资料被更改等），本公司也概不负责；
- 7、在免费保修期内，本公司或授权服务机构拥有更换后的故障的所有权及处置权。
- 8、使用本产品前，请仔细阅读本产品的使用说明书，并妥善保存购机凭证。本三包凭证内容解释权归属深圳市十度数码科技有限公司所有，如有变动，恕不另行通知。

客服服务时间：每周一至周六9:00-18:00（法定节假日除外）

全国统一服务热线：4008 939 488 公司网址：www.10shidu.com



SOUND OF CHANGE
让改变发声

产品保修卡：

购买产品时，请认真填写此卡，并予以妥善保存。

用 户 存 根	用户姓名		性别		年龄	
	通讯地址					
	联系电话				邮编	
	购买地点					
	购买日期		销售单号			
	品名及规格		机身编号			
	经销商签名		用户签名			



Welcome to use SHIDU portable speaker. For better experience the product, please read the instruction carefully before use.

Safety Warnings:

1. Please don't put the product and accessories nearby fire or other hot environment.
2. Please don't put the product and accessories nearby the water or damp places. Don't use the products near the water. In addition, avoid putting it into any liquid in case that the product and accessories will be damped.
3. Please don't optionally open or tear down the battery accessories. It may cause explosion if the battery replaced improperly. Avoid putting the battery into water, fire or near to any hot environment.
4. This product needs to user the power adapter (DC 15V, 2A) to charge. After charged, please remember to unplug the power cord or power socket. We suggest stop other operations under the charging mode. Please cut off the power supply first if you need to use it.
5. If you don't need to use it, please switch off the speaker to avoid the loss of power.
6. Please turn off the product if the wireless equipment is prohibited (it may lead to the disturbances of electronic equipment or hidden danger).
7. Please turn off the product in the flammable and combustible areas, at the same time adhere to the instructions to avoid the explosion and fire hazard. The flammable and combustible areas include: gas station flammable or chemical products, transportation and storage facility, the areas with explosion dangerous sign and the areas with the sign "turn off the bi-directional wireless equipment" etc.
8. When you take a plane, please obey the related rules and disciplines and remember to turn off the amplifier to avoid the hidden danger.


9. Please don't crush, draw, bend, tie or tread by people, avoiding the wired broken to cause to electric shock.
10. Pls take out the adapter if the speaker is belching black smoke or abnormal phenomena, to avoid the accident then contact local agency to repair.
11. Only suitable for safe use in non-tropical climate conditions, Only suitable for safe use in areas below 2000 meters above sea level.

Features:

1. 40W high-power, portable speaker;
2. Configure 6.5 inch 80 magnetic full frequency speaker;
3. 12V 2500mAh power battery;
4. Configure independent audio input and output functions;
5. Support FM radio function, TF card/USB flash drive play function;
6. UHF Wireless through-wall technology, high sensitivity Moving-Coil microphone, stable signal and clear sound.

Structure Instruction:

1. **Power ON / OFF:** Long press “  ” key three seconds, and the display screen keeps on, it means it is turned on normally, press again for 3 seconds, the display screen is off, it means it is turned off.
2. **Input option:** To select AUX in mode, Bluetooth mode, USB flash drive mode, TF card mode & UHF mode.
3. **Recording**

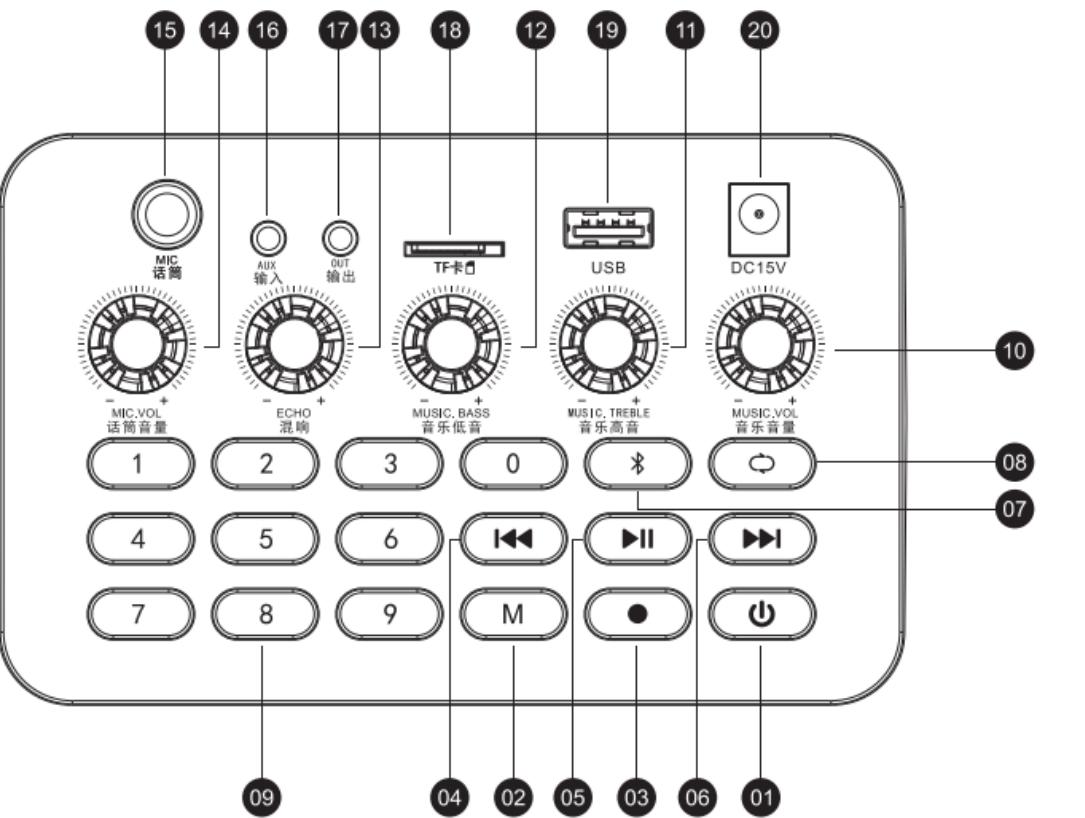

4.Previous: Short press “” to select previous audio file. Long press to fast rewinding.

5.Play/Pause

6.Next: Short press “” to select next audio file. Long press to fast forward.

7.One Key Bluetooth: Short press this button in any mode to pair the Bluetooth, long press this button in Bluettoth mode to disconnect.

8.Loop key: When play music on TF card/USB flash drive, short press this button to switch to single song repeat with screen dispaly “ONE”, short press this button again to switch back to all repeat with screen dispaly “ALL”.

9.Number selected key: Use the number pad to select the playing track in the TF card or USB flash drive, or select the FM channel.

10.Volume control: To adjust the music volume.

11.Music treble

12.Music Bass

13.ECHO: To adjust the echo effect of mic.

14.Mic volume: To adjust the microphone volume.

15.Mic input: Support wired mic input (not included).

16.Audio input

17.Audio output

18.TF card slot: Support TF card play, with a voice prompt “TF card playing”. Maximum support 32GB TF card with MP3 / WAV / WMA / FLAC / APE format.

19.USB port: Support USB flash drive play, maximum support 32G with MP3/WAV/ WMA/ FLAC/ APE format.

20.DC 15V in: Charging port, please using original adapter to charge.

TF card/USB flash drive play:

The speaker will automatically play the music file after insert TF card/USB flash drive. Support MP3 / WAV / WMA / FLAC / APE music format.

Play/Pause: When play music, short press “▶||” button to Play & Pause music.

Previous/Next: When play music, short press “◀◀” / “▶▶” button to choose play previous song and next song.


REC Function:

1.Connected the wireless or wired microphone, then insert the storage (USB flash drive or TF card). Press “●” key and hold on to enter into REC mode, the time display on LED screen will flash. Press “●” key again to stop recording, save the audio files and play the recordings.

2.In music mode, press “●” key to play back recordings with inserting storages (which have recordings). It will play the last recording by default and press “◀◀” or “▶▶” to select the previous and next recordings.

Bluetooth Function:

- 1.Turn on the speaker and press “M” to enter into Bluetooth mode with “bLUE” icon on the screen.
- 2.Turn on the Bluetooth function of your mobile phone, then search for “H9” and connect, Bluetooth pairing is successfully with a voice prompt “Bluetooth is connected”.
- 3.When playing music, please keep the amplifier close to the Bluetooth-enable device to maintain a stable connection.

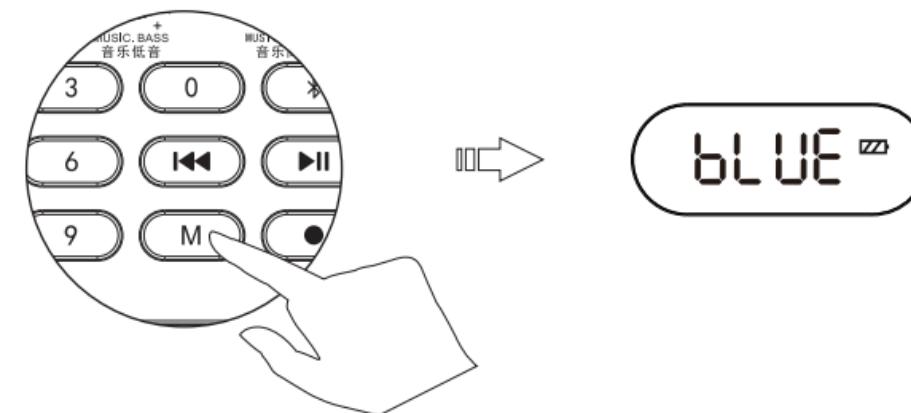


FM Function:

Switch on the speaker, short press "M" to choose the FM mode with the screen showing radio frequency; Long press "▶II" to enter into automatic channels searching, after searched successfully, the device will save the channel automatically. Please press "◀◀" or "▶▶" to choose the saved channels.

About Charging:


Power off the speaker when charging. The indicator will light on when charging and will be off after fully charged (DC 220V)

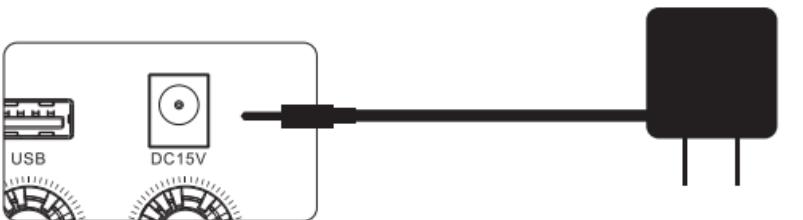

Remarks:

- The battery indicator will blink when the battery is low. Please charge it timely. (The charging time is normally 3~4 hours.)
- We recommend that you fully charged the battery before first use.


Remote control function description:

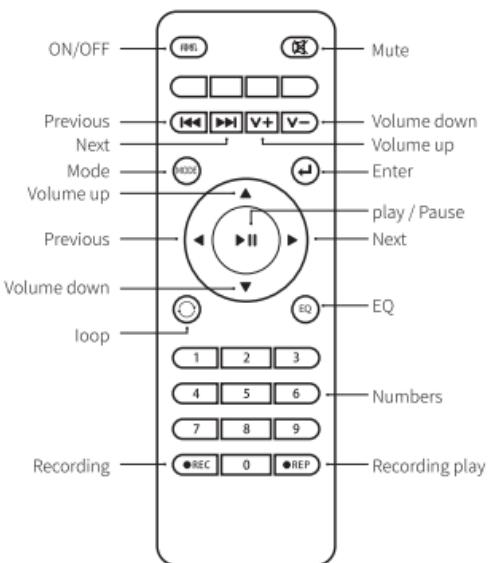

Normally, the remote control should be in front of the receiving window and within the scope of 6M & 30°.

- Please point the remote control toward the receiving window and avoid the obstacle.
 - Please avoid the strong light.
 - Please don't use old & new battery at the same time.
- Note: Please refer to the real product.

Wireless Microphone Operation:

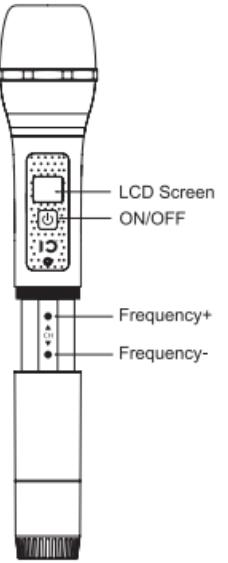

1.Switch ON / OFF:

Long press “” switch on/off the wireless microphone.

2.Pair the UHF Wireless MIC Manually (This pairing is used when the MIC is no sound)

Step1: Switch on the speaker, short press “M” key to choose UHF mode.

Step2: In UHF mode, long press “M” key three seconds to enter into UHF wireless pairing status with voice prompt “UHF is waiting for connection”.

Step3: Switch on the wireless MIC and twist-off the MIC; choose a frequency point by press “” or “”. Quickly short press “” 3 times until “MHZ” stop flashing. Paring is successful with voice prompt “UHF is connected”. Then please manually pairing the second microphone in the same way. Then it's possible to amplify voice with wireless MIC.

Notes: Under the pairing status, short press “” 3 times on the hand-held microphone to disconnect. Repeat Step1, step2 & step3 for pairing the UHF wireless MIC manually.

3.Battery Indication of UHF Wireless MIC:

It's low battery with “” indication showed on screen and please change the battery timely.

Note: Please twist off the battery cover properly and put the batteries.

(Please mind the positive & negative anode.)

Specification:

Model: H9

Power output: ≤40W

Sensitivity: 550±30mV

S/N ratio: ≥80db

Frequency response: 80Hz-18KHz

Charging voltage: DC 15V=2A

Trouble Shooting:

1.Switch on the speaker but no sound

- 1.1.No audio input: Please use another better audio files;
- 1.2.Haven't turned on the volume: Please adjust the volume properly.

2.With sound distortion

- 2.1.The volume is too high: Please turn down the volume properly;
- 2.2.The speaker is broken: Please contact us for maintenance.

3.No sound with Karaoke

- 3.1.Haven't inserted the wired MIC properly: Please insert the wired MIC properly;
- 3.2.Haven't switched on the MIC: Please turn on the MIC;
- 3.3.Haven't turned on the MIC volume on the speaker: Please adjust the volume properly;
- 3.4.The wireless MIC is low battery: Please change the batteries.

4.No sound with MP3 playing

- 4.1.The audios' format in USB flash drive or TF card is wrong: Please turn the format to MP3;
- 4.2.Chaotic procedure with wrong operation: Please restart the speaker;
- 4.3.Haven't inserted the USB flash drive / TF card properly: Please insert the USB / TF card properly.

5.Can only work several minutes after charged

- 5.1.The battery is broken: Please change a new same battery;
- 5.2.The connecting cable of battery is loosened or disconnected: Please contact us for maintenance;
- 5.3.Hasn't full charged the speaker: Please full charge it before using.

SHIDU Guarantee:

100% SHIDU Guaranteed Product Satisfaction.
We promise 1 year warranty.

If you have any questions, please feel free to contact us, we will try our best to provide you the best service.
www.10shidu.com Email:info@10shidu.com