

The Sound Of Change
让改变发声

深圳市十度数码科技有限公司
Shenzhen SHIDU Digital Technology Co.,Ltd

地址:深圳市宝安区西乡三围航空路兆丰工业园六楼
电话:0755·21635866 传真:0755·29105099

本说明书所示产品图片及文字功能已经详细核对,如出现印刷错漏,本公司不承担因此产生的后果,产品图片及详细功能参数请以实物为准。SHIDU十度商标及LOGO均已注册,受知识产权保护,未经本公司允许不得仿冒,违者必究。

本公司保留对产品更正改进的权利,届时恕不另行通知,在法律允许范围内,最终解释权归深圳市十度数码科技有限公司所有。

全国统一
服务热线 **4008 939 488**
官方网址 **WWW.10SHIDU.COM**



户外三防 原声蓝牙音响


Waterproof
Bluetooth Speaker

使用说明书
USER MANUAL

让 改 变 发 声
The Sound of Change



P9

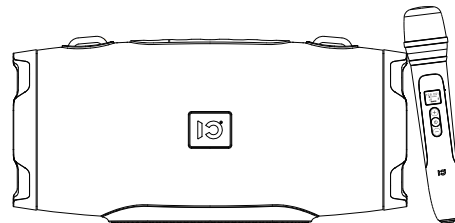

十度原声 ● 天籁之音

本机内置A品动力电池,本厂予以承诺电池保用3年

尊敬的用户：

您好！

欢迎您使用SHIDU十度数码产品！

SHIDU十度数码产品将以高科技的品质和优良的服务进入您的工作和生活，您一旦拥有，就会真切地感受到它的卓越性能和优良品质，让您时刻都能享受到生活的轻松愉快。为了让您更好的体验十度数码的精工品质，请您在使用本产品前，认真阅读本说明书。如有不解之处，您可向本公司客服咨询。

无担保申明：

本手册中的内容，除非适用法律要求，十度数码科技对本手册中的所有内容不提供任何明示或暗示的保证。

在法律允许的范围内，十度数码科技在任何情况下，都不对因使用本手册相关内容而产生的任何特殊的、附带的、间接的、继发性的损害进行赔偿，也不对任何利润、数据、商誉或可预期的损失进行赔偿。

进出口管制：

若需将此产品手册中描述的产品出口、再出口或者进口，您应遵守适用的进出口管制法律法规。



安全警告：

- 1.请勿将产品及配件靠近火源或任何过热的环境中。
- 2.请勿将产品及配件接触水及湿气，不要在靠近水的地方使用本设备，也不要将产品浸入任何液体中，避免产品及配件受到水滴或水溅。
- 3.请勿自行打开或任意拆解、维修电池组件，如果电池更换不当会有爆炸危险，严禁将电池投入水、火中或靠近任何过热的环境中。
- 4.本产品由外接电源适配器（DC 15V  2A）充电后使用，充完电后可方便的通过拔掉电源适配器插头断开电网电源。
- 5.当用户暂不使用本产品时，请将产品“电源开关”关闭（参见产品操控示意图），避免电池电量的流失。
- 6.当禁止使用无线设备或设备的使用会引起电子设备的干扰与安全隐患时，请关闭本产品。
- 7.在易燃易爆区域，请关闭本产品，并遵守相关标示说明，以免引起爆炸或火灾。易燃易爆区域包括但不限于：加油站、易燃或化工制品运输及存储设施、有爆炸危险标志的区域，有“关掉双向无线电设备”标志的区域。
- 8.乘坐飞机时，请遵守航空公司有关规定和条例，在飞机起飞前关闭本产品，以免造成安全隐患。
- 9.电源线不能被挤压、拉扯、弯曲、打结、悬挂重物或被人践踏。以防止电源线的绝缘层被损坏导致触电。
- 10.如机器发生冒烟或其他异常现象，请迅速拔出电源插头，避免引起意外事故，并联系当地经销商进行维修。

产品特性：

- 1、十度原声蓝牙 HIFI 音响，50W大功率；
- 2、85磁羊毛盘，2.75寸低音喇叭和1.1寸丝膜高音喇叭；
- 3、6*4000mAh A品动力电池，保用三年；
- 4、蓝牙5.0云控，支持网络同步教材、音乐在线播放、无线卡拉OK功能；
- 5、配置独立音频输入、输出；
- 6、支持TF卡、U盘播放功能；
- 7、话筒采用UHF无线穿墙技术，高灵敏度动圈咪芯，CNC高精密铝合金金属外壳。

主要功能说明：

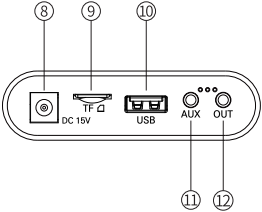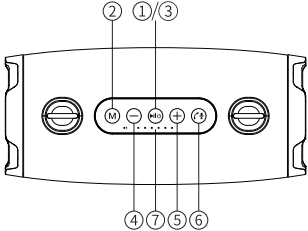

- 1.开/关机：长按“”键3秒开机语音提示后，蓝灯亮起开始快速闪烁，表示正常开机，再次长按“”3秒关机。
- 2.模式切换：a、短按此按键可进行菜单选择，用来切换音频输入模式、蓝牙模式、U盘播放、TF卡播放、UHF模式。
b、在音乐模式下长按“M”键为单曲循环，再次长按“M”键是全部循环。
- 3.暂停/播放：在播放状态下短按“”键为暂停，再次短按“”键为播放。
- 4.音量减/上一曲：在音乐播放模式下，长按“”键为音量减；短按“”键为上一曲。
- 5.音量加/下一曲：在音乐播放模式，长按“”键为音量加；短按“”键为下一曲。
- 6.一键通话：在来电状态下短按“”键为接听，再次短按“”键为挂断。
- 7.LED指示灯：a.蓝色指示灯快速闪烁表示蓝牙正在等待配对；b.蓝色指示灯长亮为配对成功；c.绿色指示灯逐个闪烁表示正在充电。
- 8.DC 15V输入口：本音箱设备充电输入口，请使用原厂标配充电器为本机充电。
- 9.TF卡插口：插入TF卡，播放卡中的音频文件。
- 10.USB插口：（仅限数据传输读取U盘）
- 11.AUX音频输入口：将主机通过音频线与电脑、手机、MP3/MP4等外接音源连接后，主机提示“音频输入”，即可直接播放上述外接音源。
- 12.音频输出口

蓝牙功能操作说明：

◎首次使用蓝牙音箱，需要与手机配对连接，步骤如下：

第一步：将蓝牙音箱开机，主机提示“蓝牙等待配对”。

第二步：打开手机，进入手机的“设置”菜单，找到蓝牙功能选项，打开手机的蓝牙功能，点“扫描”按钮，待搜索到“P9”点击“P9”连接即可。

第三步：连接成功后，主机提示“蓝牙已配对”，即可通过P9播放手机教学教材、培训资料、歌曲播放等。同时也可与无线麦克风配合使用，实现诗歌朗诵，通过手机K歌软件实现同步K歌等功能。

无线通话：


1.电话接听：在蓝牙模式时，短按“”为来电接听，再次短按“”为挂机。

2.电话拒接：在蓝牙模式时，长按“”为拒接。

3.电话重拨：在蓝牙模式时，长按“”是重拨上一次拨出的电话。


TF卡/U盘功能说明：

◎按照主机标识的方向将TF卡/U盘正确插入主机TF卡/U盘槽后，主机将自动播放TF卡/U盘中的音乐文件，同时可通过操作上一曲、下一曲键选择自己喜欢的曲目。

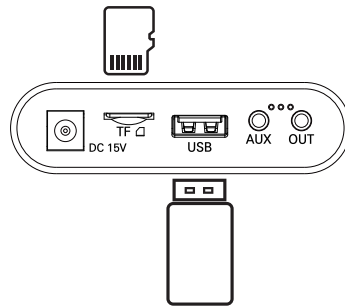

充电功能操作说明:


◎充电时, 请先将主机电源开关关闭, 关机状态充电, 请用原厂标配电源适配器接上220V插座进行充电, 充电时间约4-6小时充满, 充满电后应拔掉电源适配器插头断开电网电源。

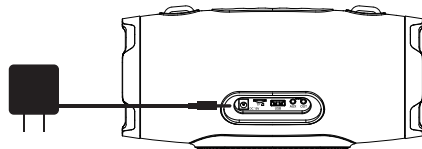

◎电量指示: 机器电量指示灯绿灯, 共分为5个绿色指示灯, 每个指示灯代表20%的电量, 5个绿色指示灯全亮时为100%, 3个绿色指示灯为60%.....依此类推, 当主机只显示一个绿色指示灯时表示电池低电, 请及时充电, 充电时电量指示灯会逐个闪烁, 充满电后电量指示灯5个绿灯长亮, 充满电后电池要继续充电1小时, 这样能延长电池使用时间。

◎若电池欠压, 请在48小时内把电充满, 当主机电量完全耗尽自动关机后请将主机放置在空旷的区域远离可燃物品关机充电。

无线话筒功能说明:

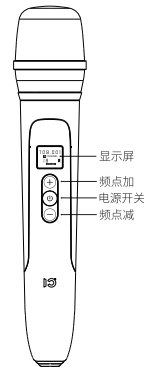

1.UHF无线话筒开/关机:

- ◎长按“”键开机, 屏幕显示默认频点值, 打开主机即可实现UHF无线扩音; 在开机状态下, 长按电源“”开关键, 屏幕熄灭表示话筒已关机;
- ◎在使用过程中短按“+”为切换加频点, 长按“+”为加音量; 短按“-”为切换减频点, 长按“-”为减音量(话筒音量只能在话筒上调节)。(注: 话筒15秒后会屏保, 短按任意一个键就可以点亮屏幕)

2.UHF无线话筒手动配对:(此操作方法运用于话筒无声时手动配对)

- ◎打开主机切换到UHF模式, 长按“M”键3秒, 提示UHF等待配对, 蓝色指示灯快闪, 表示已进入UHF无线配对状态;
- ◎将手持式UHF无线话筒开机, 显示当前的频点, 快速短按开机键3次当前频点闪烁, 表示无线话筒与机器已手动配对成功, 即可实现无线扩音。

UHF无线话筒电量说明：

◎在使用过程中，手持式UHF无线话筒显示屏电量提示符为“ ”满格时，表示电量充足；当显示电量提示符为“ ”空格时，表示电池低电，请及时充电。

◎充电时，先将手持式UHF无线话筒关机取出随机配备的USB充电线，给手持式UHF无线话筒充电；充电时，手持式UHF无线话筒红色指示灯长亮，充满电后红色指示灯熄灭。

注意：

- 1、充电时间约3~4小时充满；
- 2、第一次使用时，手持式UHF无线话筒时电池有小部分电量，但为了达到最佳扩音效果，请先充满电再使用；
- 3、充完电后可方便的通过拔掉电源适配器插头断开电网电源；
- 4、本机自带充电线，适用各类手机电源适配器为本机充电。

主要技术规格：

产品型号：----- P9	额定功率：----- ≤50W
灵 敏 度：----- -49±3dB	信 噪 比：----- ≥90dB
频 响：----- 30Hz-20KHz	输入规格：----- DC 15V  2A

以上规格为样机技术规格，仅供参考。本产品不断改进，设计规格的功能可能有所更改，恕不另行通知。



中华人民共和国电器产品
国家强制认证安全标志



仅适用于非热带气候
条件下安全使用



仅适用于海拔 2000 米
以下地区安全使用

故障自我检查：


用户在使用本机过程中，如发现有问題，请按下面的故障检修表逐一检查。仍然不能解决问题，请找本公司在当地的经销服务商或拨打本公司的客服热线咨询。故障检修表具体详见下表所示：

故障现象	可能原因	处置方法
打开电源 无任何声音	1、主机没电 2、没有输入音源 3、音量调节处于最小位置	1、给主机充电后检查显示屏是否点亮正常开机 2、重新检查设置音频输入信号 3、适当调节音量
声音失真	1、音量调节过大 2、音响可能损坏	1、将主音量调小 2、检查音箱是否损坏，若损坏，需维修
卡拉 OK 无声	1、话筒开关没有打开 2、话筒音量旋钮处于最小位置 3、UHF 无线已断开或者无线话筒电池电量不足	1、打开话筒开关 2、适当调节话筒音量 3、重新手动配对 UHF 无线话筒，或者充满电后再使用
MP3无声	1、U 盘歌曲格式不对 2、操作不当引起程序混乱 3、U 盘 /TF 卡没有插好	1、将歌曲格式转成MP3格式 2、开机重新启动机器 3、插好U盘/TF卡或者格式化重新拷文件
充电后仅能 使用几分钟 或连接适配器 时才能使用	1、电池损坏 2、电池连接线松/断 3、未将电量充足	1、更换同型号的电池 2、找本公司当地经销服务 3、将电量充足后再使用

SHIDU SD-P9 is a high-end Bluetooth Speaker with many features. In your spare time, you can enjoy fantastic music in home, coffee house and even trip. Anytime, anywhere, music to non-stop. SD-P9 Bluetooth Speaker is the best choice for you.

Please read the instruction carefully before using it.

Function Illustration:

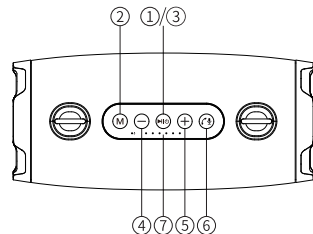

1.Switch on / off Key: Press the “

2.Mode Key: a.After power on, it will be on Bluetooth mode automatically. Please short press “

b.In music playing mode, long press “

3.Play/Pause: In music playing mode, short press “

4.Volume - / Previous: Long press “

5.Volume + / Next: Long press “

6.Hands-free call: In Bluetooth mode, short press “

7.LED Indicator: a.Bluetooth is waiting for connection with blue light flashing. b.Bluetooth is connected with blue light being on all the time. c.Green lights flashing one by one while charging.

8.DC 15V in: Charging port

9.TF card slot: Support TF card, maximum up to 32G (MP3 WAV WMA) with a voice prompt “TF card playing”.

10.USB slot: Support USB flash drive, maximum up to 32G (MP3 WAV WMA) with a voice prompt “USB flash driver playing”.

11.AUX Port: Connect the speaker with computer, phone, MP3/MP4 or other device with audio cable, it will remind “Audio in Mode”, and then it can play above audio files directly.

12.Audio output

Bluetooth Function:

Step1: Switch on the speaker and press “

Step2: Turn on the Bluetooth function of your mobile phone and search “P9”. Click and it will be connected successfully with a voice prompt “Bluetooth is connected”.


Step3: After successful connection, it can play the audio files.

Hands-free Call:

1. Answer: In Bluetooth mode, short press “


12

TF card/USB flash drive music play:

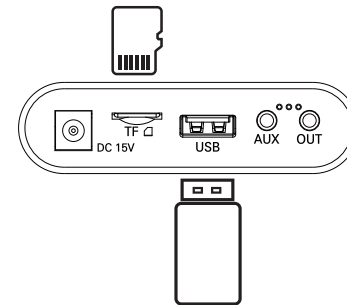
Insert the TF Card/USB Flash Drive. Audio will play automatically. Short press the “A diagram of the rear panel of a device, showing various ports and connectors. At the top is a TF card slot. Below it is a DC 15V port. To the right of the DC 15V port is a USB port. Further right are two circular ports labeled AUX and OUT. A USB flash drive is shown inserted into the USB port.

Charging:

1. Please use the standard adapter, the other end connects with the power supply AC 110~240V to charge. Please unplug the adapter timely after fully charged (the charging time is normally 4~6 hours).
2. Battery Status: There are 5 green battery indicator and each represents 20% battery. 5 indicators on means 100%, 3 indicators on means 60% battery It's low battery when only one green indicator on. Please charge it timely. Green indicator flashing one by one while charging. The indicators will be constant on after fully charged.
Please charge it 1~2 hours more after fully charged to lengthen the life of battery. Please don't over charge too much time.
3. Please recharge the battery within 48 hours if the battery is too low. Keep the battery have electricity even if it don't work for a long time. Please recharge the battery in open area when it is completely discharged and automatic shut down to avoid combustible.

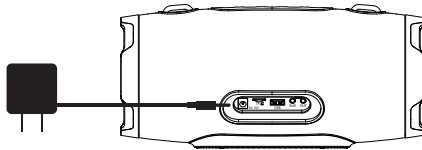

How to use hand UHF wireless microphone:

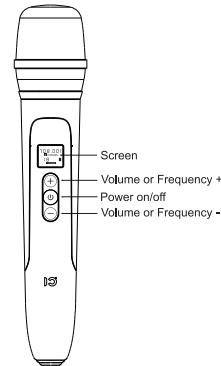

1. Switch ON / OFF

Long press “” to switch on and there will be UHF frequency point by default shows on the screen.

Long press “” to switch off and the screen will go out.

2. Pair the UHF wireless MIC manually (This operation only suits for no sound from the MIC)

Step 1: Turn on the speaker, long press “” key for 5 seconds, amplifier comes a voice prompt “UHF is waiting for connection”.

Step 2: Switch on the wireless hand-held MIC, Quick press “” key three times, pairing is successful with a voice prompt “UHF is connected”.

3. Volume control

When use, long press “+” on the microphone to increase volume. Long press “-” to reduce volume. You can also control volume on your speaker.

Charging instructions of UHF wireless MIC:

In working status, it has sufficient battery power with “” indication showed on screen; it’ s low battery with “” indication showed on screen and please charge the battery timely. Please switch off the microphone before charging. Use the charger with DC 5V output connects with Micro-USB cable to charge the microphone. The red light next to the charging port will be on all the time when charging and it will go out after fully charged.

Specification:

Output power:	50W	Frequency response:	30Hz-20KHz
Output Impedance:	4Ω	Working temperature:	-10°C-45°C
Charging voltage:	DC 15V	Battery:	12V 4000mAh
Support TF card:	≤32G	Bluetooth version:	5.0 sync + EDR
Working time:	6-8 hours	Charging time:	4-6 hours

Trouble shooting:

1.Switch on the speaker but no sound

1.Main machine is running out of battery. Please recharge it to switch on. 2.No audio input. Please use another better audio. 3.Haven’t turned on the volume. Please adjust the volume properly.

2.With sound distortion

1.The volume is too high. Please turn down the volume. 2.The speaker is broken. Please contact us for maintenance.

3.No sound with Karaoke

1.Haven’ t switched on the MIC. Please turn on the MIC. 2.Haven’ t turned on the MIC volume. Please turned on the MIC volume. 3.The UHF wireless is disconnected or wireless MIC is low battery. Please repair the UHF wireless microphone, or please charge the battery.

4.No sound with MP3 playing

1.The audio’s format in USB flash drive or TF card is wrong. Please turn the format to MP3. 2.Chaotic procedure with wrong. Please restart the speaker. 3.Haven’t inserted the USB flash drive/TF card properly. Please insert the USB/TF card properly.

5.Only can work several minutes after charged or have to work with Adapter

1.The battery is broken. Please change a new battery 2.The connecting cable of battery is loosened or disconnected. Please contact us for maintenance. 3.Hasn’t full charged the speaker. Please full charge it before using.

SHIDU Guarantee:

100% SHIDU Guaranteed Product Satisfaction.
We promise 1 year warranty.
If you have any questions, please feel free to contact us, we will try our best to provide you the best service.
www.10shidu.com Email:info@10shidu.com