

**注意:** 本手册描述的产品及其附件的某些特征和功能,仅供参考。十度数码科技保留随时修改本手册中任何信息的权利,无需进行任何提前通知且不承担任何责任

**无担保声明:** 本手册中的内容,除非适用法律要求,十度数码科技对本手册中的所有内容不提供任何明示或暗示的保证。在法律允许的范围内,十度数码科技在任何情况下,都不对因使用本手册相关内容而产生的任何特殊的、附带的、间接的、继发性的损害进行赔偿,也不对任何利润、数据、商誉或可预期的损失进行赔偿。

**进出口管制:** 若需将本产品手册中描述的产品出口、再出口、或者进口,您应遵守适用的进出口管制法律法规。



## 蓝牙音响

### 使用说明书

USER MANUAL



关注十度微信公众号  
回复型号“F1”  
获取设备使用教程

深圳市十度数码科技有限公司 4008 939 488  
Shenzhen SHIDU Digital Co.,Ltd www.10shidu.com

地址:深圳市宝安区新和新兴工业园2区A8栋十度科技园  
电话:0755-21635866 传真:0755-29105099

本说明书所有产品图片及文字功能已经仔细核对,如出现印刷错误,本公司不承担任何因此产生的后果,产品图片及详细功能参数请以实物为准。  
SHIDU十度商标及LOGO均已注册,受知识产权保护,未经本公司允许不得仿冒,违者必究。本公司保留对产品更正改进的权利,届时恕不另行通知,在法律允许范围内,最终解释权归深圳市十度数码科技有限公司所有。


**安全警告:**

- 请勿将产品及配件靠近火源或任何过热的环境中。
- 请勿将产品及配件接触水及湿气,不要在靠近水的地方使用本设备,也不要将产品浸入任何液体中,避免产品及配件受到水滴或水溅。
- 请勿自行打开或任意拆解、维修电池组件,如果电池更换不当会有爆炸危险,严禁将电池投入水、火中或靠近任何过热的环境中。
- 本产品由外接电源适配器(5V 1.5A电源)充电后使用,充电后可方便的通过拔掉电源适配器插头断开电网电源,充电时将产品放置于空旷区域充电,远离易燃物品,请勿边充电边使用。
- 本机自带充电线,消费者若使用电源适配器充电,则应购买配套使用获得CCC认证并满足标准要求的电源适配器为本机充电。
- 当用户暂不使用本产品时,请将产品“电源开关”关闭(参见产品操控示意图),避免电池电量的流失。
- 当禁止使用无线设备或设备的使用会引起电子设备的干扰与安全隐患时,请关闭本产品。
- 在易燃易爆区域,请关闭本产品,并遵守相关标示说明,以免引起爆炸或火灾。易燃易爆区域包括但不限于:加油站、易燃或化工制品运输及储存设施、有爆炸危险标志的区域,有“关掉双向无线电设备”标志的区域。
- 乘坐飞机时,请遵守航空公司有关规定和条例,在飞机起飞前关闭本产品,以免造成安全隐患。

**产品特点:**

- TWS双机互联
- 蓝牙5.0,支持FM功能
- 输出为2\*5W,800mAh锂电池
- 支持TF卡读卡器数据拷贝
- 支持USB声卡播放

**按键功能介绍:**

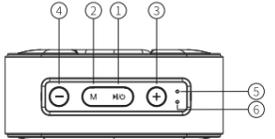

- 1. 开关机/暂停播放:** 长按3秒蓝灯亮起开始快速闪烁为开机,再次长按3秒关机。在播放状态下短按“M”为暂停,再次短按“M”为播放。

**2. 模式切换:** 开机状态默认为蓝牙模式,短按“M”键可在蓝牙音乐播放、TF卡音乐播放和FM收音之间相互进行模式切换。

在TF卡模式下长按“M”键为单曲循环,再次长按“M”键为全部循环。

**3. 音量加/下一曲:** 在音乐模式下,长按“+”键为音量加,短按“+”键为下一曲。

**4. 音量减/上一曲:** 在音乐模式下,长按“-”键为音量减,短按“-”键为上一曲。

**5. 充电指示灯:** 充电时红灯长亮,充满红灯熄灭。

**6. LED指示灯:** 蓝色指示灯快速闪烁表示蓝牙正在等待配对,蓝色指示灯长亮为配对成功。

**蓝牙配对与连接:**

首次使用蓝牙音箱,需要与手机配对连接,步骤如下:


第一步:将蓝牙音箱开机,主机提示“蓝牙已准备好,正在等待配对”。

第二步:打开手机,进入手机的“设置”菜单,找到蓝牙功能选项,打开手机的蓝牙功能,点“扫描”按钮,待搜索到“F1”点击“F1”连接即可。

第三步:连接成功后,主机提示“蓝牙已配对”,即可实现手机与无线音响同步操作。


**双机TWS蓝牙互连功能:**

第一步:将两台主机同时打开,切换到蓝牙模式,长按其中一台主机“M”键进入等待连接状态,连接成功后另一台主机蓝牙蓝色指示灯长亮,表示两台主机蓝牙相互串联成功。

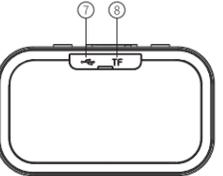

**7. USB插口:** 可实现声卡/TF卡拷贝资料/充电功能。

**8. TF卡插口:** 插入TF卡,播放卡中的音频文件。

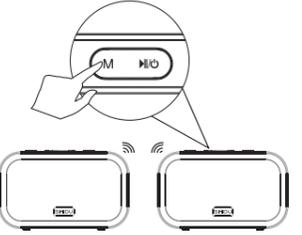

第二步:手机连接蓝牙功能,进入手机“设置”菜单,找到蓝牙功能选项,打开手机蓝牙功能,点击手机“扫描”按钮,待搜索到“F1”,点击“F1”连接即可实现双机蓝牙同步播放,带给您音乐会现场般的环绕立体音效。

第三步:可通过长按主机“M”键,退出TWS互连功能。

**FM收音:**

在开机状态下,按“M”键切换到收音模式后,再长按“M”键进入自动搜台模式;自动搜台时蓝灯快速闪烁,自动搜台完成后,主机会自动保存搜索到的广播频道,可通过短按“-”或是“+”键选择存储的播放频道。

**为主机充电:**

在工作状态下,当主机提示“电池电量不足请充电”时,使用随机配送的USB充电线连接主机与电源,充电时红色指示灯长亮。本机在充电时红色指示灯长亮,充满电后红色指示灯熄灭,充电后可方便的通过拔掉电源适配器插头断开电网电源,使用标准DC 5V 1.5A电源充电,充电时间约为3-4小时充满。  
注:本机自带充电线,请选择优质电源适配器为本机充电,本机适用安卓手机充电器(5V 1.5A电源适配器)充电后使用。

**常见问题的解答:**

故障	解决方法
多次连接配对不成功	关闭音箱重新开机 如果你的设备需要通行码,请输入 0000
音乐播放出现断音	连接设备是否超出有效连接距离,或音箱同连接设备之间有障碍物
TF卡出错格式错误	检查TF卡格式是否正确(音箱支持TF卡格式为FAT32) TF卡内文件是否为WAV、MP3
播放时无声	检查音箱音量是否有调节 检查音箱是否处于静音或暂停状态
无法开机、关机操作无反应	可长按电源开关键 10 秒进行复位关机,再长按电源开关键开机后检查性能是否正常。

**售后服务条例:**

**一、本公司提供的售后服务方式:**

- 1. 咨询服务:** 用户在使用产品前,请仔细阅读本产品的使用说明书。在使用过程中遇到问题,均可与当地经销商联系,或致电十度全国统一客服热线:4008 939 488。
- 2. 包换服务:** 包换期内(自购机之日起七日内),正常使用出现了非人为故障,请保持产品、配件和包装的外观与完整(若外观损坏,作保修处理),经检测确认故障后,可选择换货或修理,用户可到当地十度委托经销商处联系处理。
- 3. 保修服务:** 保修期内,正常使用出现了非人为故障,均可享受免费保修服务(主机一年内免费保修,若人为损坏,作收费维修处理)。
- 4. 收费维修服务:** 产品在购机之日起一年到三年内,出现故障可收费维修,用户需要支付维修所需的元件费、运输费和合理的维修人工费。
- 5. 以下情况不在三包范围内,本公司可提供有偿服务:**
  - (1) 超过三包期限。
  - (2) 意外因素或人为行为导致的产品损坏(如:未按使用说明书操作、维护或保管,错误安装造成的故障,接入不合适的电源,进水、渗油、摔坏等)。
  - (3) 无有效三包凭证。
  - (4) 因不可抗力如地震、火灾、水灾、雷击等导致的产品故障或损坏。
  - (5) 未经本公司许可,擅自拆卸、修理或改装。
  - (6) 在运输、搬卸过程中造成的故障、损伤。

**二、关于售后服务的说明:**

- 1.购机日期以本凭证为准,不能有效证明的,以生产日期为准。
- 2.质量问题不包括用户个人对音质、音色等主观异议。
- 3.配件、外壳、说明书、包装不在保修服务范围内。
- 4.对已停产型号产品的服务,本公司仅做功能性修复。(外观可能与原产品有异)。
- 5.经销商向您做出的非本公司保证的其它承诺,本公司不承担任何责任。
- 6.用户在接受服务之前请将重要资料另行备份或记录,因维修或其他任何原因造成的任何损失,本公司概不负责。因保管不善等原因将机内资料泄露给第三者所造成的损失(如:银行账号、密码、资料被更改等),本公司也概不负责。
- 7.在免费保修期内,本公司或授权服务机构拥有更换后的故障件的所有权及处置权。
- 8.使用本产品前,请仔细阅读本产品的使用说明书,并妥善保存购机凭证。本三包凭证内容解释权归属深圳市十度数码科技有限公司所有,如有变动,恕不另行通知。

客服服务时间:每周一至周六 9:00 - 18:00 (法定节假日除外)  
全国统一服务热线: 4008 939 488 公司网址: www.10shidu.com

**产品保修卡**

购买本产品时,请认真填写此卡,并予以妥善保管。


产品型号:	
购买日期:	
用户名:	
用户地址:	
联系电话:	
经销单位:	
地址:	
负责人:	
联系电话:	
签章:	

SHIDU F1 is a high-end Bluetooth Speaker with many features. In your spare time, you can enjoy fantastic music at home, coffee house and even on the trip. Anytime, anywhere, music is non-stop. F1 Bluetooth Speaker is the best choice for you. Please read the instruction carefully before using it.

**Features:**

- 1.SHIDU patented appearance;
- 2.Support TWS (true wireless stereo) function;
- 3.Support Bluetooth 5.0 and FM Radio;
- 4.Support USB sound card function;
- 5.Support TF card reader copy data;
- 6.Speaker output power 2\*5W, 800mAh Lithium battery.

**Function Illustration:**

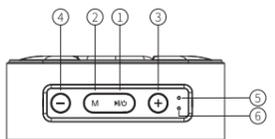

- 1.Switch on / off & Pause/Play Key:** Press the “M” for 3 seconds, the blue light will start fast flashing with voice prompt, the speaker is on; press the button for 3 seconds to switch off.

In music playing mode, short press “M” for pause, short press “M” again for play.


**2.Mode Key:** In the case of power on, it will be on Bluetooth mode automatically. Please short press “M” to select a working mode (Bluetooth,TF card,FM). In music playing mode, long press “M” to enter into single loop, long press it again into all loop.

**3.Volume + / Next:** Long press “+” for volume up, short press “+” for next.

**4.Volume - / Previous:** Long press “-” for volume down, short press “-” for previous.

**5.Charging indicator light:** The red indicator light will be on all the time during charging and will go out after fully charged.

**6.LED Indicator light:** Bluetooth is waiting for connection with blue light flashing. Bluetooth is connected with blue light being on all the time.

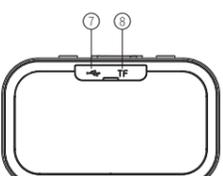

**7.USB Port (DC 5V):** a.Support sound card function; b.TF card reader copy data; c.Charging port.

**8.TF Card Port:** Insert the TF card to play mp3. It is compatible with most brands, the maximum capacity is 32GB.

**Bluetooth pairing:**

Using Bluetooth speaker for the first time, need to pair with mobile, proceed as follows:

**Step 1:** Turn on the Bluetooth speaker with voice prompt “Bluetooth is waiting for connection”. The blue light is fast flashing.

**Step 2:** Turn on the bluetooth function of your bluetooth audio device, search “F1” and connect with it.

**Step 3:** The Bluetooth pairing will be successful with a voice prompt “Bluetooth is connected”. The blue light stops flashing and will be on all the time.

**True Wireless Stereo:**

**Step1:** Turn on two speakers with voice prompt “Bluetooth is waiting for connection”. Long press“M”of one speaker to enter into pairing status, when the blue light of another speaker stop flashing, which means this two speaker connected successfully.

**Step2:** Turn on the Bluetooth function of your device and search“F1”. Click and it will be pair successfully. Two speaker will play simultaneously.

**Step3:** Long press “M” of one speaker to exit this function.

**USB sound card function / Copy files function:**

In the state of power-on, connect the speaker with PC by Type-C USB cable, then it can play audio files in PC directly.

In the state of power-off, connect the speaker with PC by Type-C USB cable. Turn on the speaker, short press “M” to switch to Sound card mode, then you can play audio files in PC directly. Meanwhile, you can copy and delete files in SD card through computer.

**FM Radio:**

- 1.Turn on amplifier and short press “M” to FM mode;
- 2.Long press “M” to enter into automatic channel searching with blue indicator flashing quickly; after searched successfully, the amplifier will save the channels automatically;
- 3.Short press “+” or “-” to choose the saved channels.

**Charging:**

In the state of power-on, the speaker is low battery with a voice prompt “Low battery, please charge”. Please connect speaker with power using the charging cable. The red indicator light will be on all the time during charging and will go out after fully charged.

After the battery is fully charged, the power supply can be disconnected by unplugging the power adapter. Please recharge it with 5V 1.5A adapter and the charging time is normally 3-4 hours.

**Trouble shooting:**

**Can't pair successfully after several attempts:**

- 1.Switch off the speaker and switch it on again;
- 2.If a password is needed, please enter 0000.

**The music is staccato when playing:**

- 1.Please check whether the distance beyond the effective range (normally 8-10M) or not;
- 2.Clear the barriers between the device and speaker.

**There are problems with TF card playing:**

- 1.The supported maximum capacity of TF card is 32G;
- 2.The audio formats should be MP3.

**Can't switch on or off and no response for any operation:**

- 1.Please check whether or not the speaker is paused or in minimum volume state;
- 2.Reset the speaker with long pressing the power button for about 10s and then switch on.

**SHIDU Guarantee:**

100% SHIDU Guaranteed Product Satisfaction. We promise 1 year warranty. If you have any questions, please feel free to contact us, we will try our best to provide you the best service. www.10shidu.com Email: service@10shidu.com