

# F5说明书 风琴折,尺寸60×90mm

封面 ↓

**二、关于售后服务的说明:**

- 1.购机日期以本凭证为准,不能有效证明的,以生产日期为准。
- 2.质量问题不包括用户个人对音质、音色等主观异议。
- 3.配件、外壳、说明书、包装不在保修服务范围内。
- 4.对已停产型号产品的服务,本公司仅做功能性修复。(外观可能与原产品有异)。
- 5.经销商向您做出的非本公司保证的其它承诺,本公司不承担任何责任。
- 6.用户在接受服务之前请将重要资料另行备份或记录,因维修或其他任何原因造成的任何损失,本公司概不负责。因保管不善等原因将机内资料泄露给第三者所造成的损失(如:银行账号、密码、资料被更改等),本公司也概不负责。
- 7.在免费保修期内,本公司或授权服务机构拥有更换后的故障件的所有权及处置权。
- 8.使用本产品前,请仔细阅读本产品的使用说明书,并妥善保存购机凭证。本三包凭证内容解释权归属深圳市十度数码科技有限公司所有,如有变动,恕不另行通知。

客服服务时间:每周一至周五 9:00—18:00 (法定节假日除外)  
全国统一服务热线: 4008 939 488 公司网址: www.10shidu.com

**产品保修卡**

购买本产品时,请认真填写此卡,并予以妥善保管。

产品型号: \_\_\_\_\_

购买日期: \_\_\_\_\_

用户名: \_\_\_\_\_

用户地址: \_\_\_\_\_

联系电话: \_\_\_\_\_

经销单位: \_\_\_\_\_

地址: \_\_\_\_\_

负责人: \_\_\_\_\_

联系电话: \_\_\_\_\_

签章: \_\_\_\_\_


Welcome to use SHIDU Bluetooth speaker. In your spare time, you can enjoy fantastic music in home coffee house and even trip. Enjoy non-stop music anytime anywhere. SD-F5 Bluetooth Speaker is the best choice for you.

Please read the instruction carefully before using it

**Features:**

1. Support Bluetooth connection and automatic reconnection;
2. Support TF card and USB flash drive playback;
3. Support FM function;
4. BL-5C lithium polymer battery 1000 mAh;
5. 5W output power;
6. LED display screen;
7. internal magnetic horn 4 Ω 3W;
8. Support memory playback function/intelligent voice prompts.

**Function illustration:**

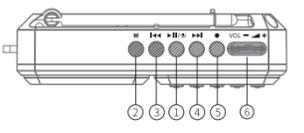

**1.Power on/Power off:**  
Press and hold the the button "▶▶▶" for 3 seconds until the speaker powers on,the display screen will light up.Press and hold the button "▶▶▶"again for 3 seconds to turn off the speaker, the display screen will light off.

**Play/Pause:** Short press it to pause, and press again to play .

**2.Mode button:**  
a.Short press the "M" button to select the following modes:USB flash drive mode,TF card mode ,FM mode, Bluetooth mode,AUX mode.  
b. When playing music on TF card/USB flash drive, long press it for 3 seconds to switch to single song repeat with screen display "ONE". Long press it again to switch back to all repeat with screen display "ALL".

**3.Previous:** Short press "◀◀◀" to select previous audio file,long press it to fast backward.

**4.Next:** Short press "▶▶▶" to select next audio file,long press it to fast forward.


**5.Recording:**  
Insert a USB flash drive or TF card, and press "●" key to start recording,the screen will display the recording time.Press "●" key again to stop recording, it will automatically play the present recording files.

**6.Volume control**


**7.Charging port**  
**8.USB port:**Support USB flash drive play, maximum up to 32G.

**9.AUX input:** Connect the speaker with Mobile phone,computer,MP3,MP4 via audio cable to play audio,the screen will display "AUX".

**10.TF card slot:**Support TF card(SD card), maximum up to 32G.



**11.Number Keypad:** In TF card mode/USB mode/FM mode,select the audio file or FM channel in fast way.

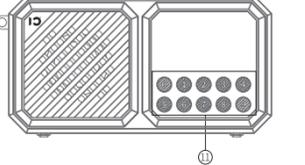

**FM radio:**


FM radio: Short press "M" to choose the FM mode, the screen will display the current FM channel. Long press "M" to search the FM channels automatically, after searched successfully, the speaker will save the channels automatically. You could press "◀◀◀" or "▶▶▶" to choose the saved channels.



**Bluetooth Function:**


- 1.While powered on, short press "M" button to switch to Bluetooth mode. A voice will prompt "Bluetooth is waiting for connection" and Bluetooth icon on screen will flash, which indicates that the speaker is in Bluetooth pairing mode .
- 2.Open your device' s Bluetooth menu,then search for "F5" and select it to pair. Bluetooth pairing is complete with a voice prompt "Bluetooth is connected".

When playing music, please keep the speaker close to the device to maintain a stable connection.



**About Charging:**

Insert the USB Type-C cable into the speaker' s DC 5V charging port and connect the other end to any USB adapter or charging device.The speaker' s battery icon will flash while charging. After fully charged,the battery icon will always on.



**Note:**

- a.While working,the battery icon on the screen flash continuously, indicating that the battery is low, please charge it in time,the charging time is normally 2~3 hours.
- b.Full charge before first use of the speaker to ensure best results.

**Trouble shooting:**

**Can't pair successfully after several attempts:**

- 1.Switch off the speaker and switch it on again;
- 2.If a password is needed, please enter 0000.

**The music is staccato when playing:**

- 1.Please check whether the distance beyond the effective range (normally 8-10M) or not;
- 2.Clear the barriers between the device and speaker.

**There are problems with TF card playing:**

- 1.The supported maximum capacity of TF card is 32G;
- 2.The audio formats should be WAV/MP3.

**No sound when playing:**  
Please check whether or not the speaker is paused or in minimum volume state.

**Can't switch on or off and no response for any operation:**  
Reset the speaker with a thin and long metal needle, then switch it on again.

**SHIDU After sales service:**  
If you have any questions, please feel free to contact us, we will try our best to provide best service.  
www.10shidu.com Email: service@10shidu.com

**蓝牙音响**

**使用说明书**

USER MANUAL



关注十度微信公众号  
回复型号"F5"  
获取设备使用教程

封底 ↓

**安全警告:**

- 1.请勿将产品及配件靠近火源或任何过热的环境中。
- 2.请勿将产品及配件接触水及湿气,不要在靠近水的地方使用本设备,也不要将产品浸入任何液体中,避免产品及配件受到水源或水溅。
- 3.请勿自行打开或任意拆解、维修电池组件,如果电池更换不当会有爆炸危险,严禁将电池投入水、火中或靠近任何过热的环境中。
- 4.本产品由外接电源适配器(5V 1.5A电源)充电后使用,充完电后可方便的通过拔掉电源适配器插头断开电网电源,充电时将产品放置于空旷区域充电,远离易燃物品,请勿边充电边使用。
- 5.当用户暂不使用本产品时,请将产品"电源开关"关闭(参见产品操作示意图),避免电池电量的流失。
- 6.当禁止使用无线设备或设备的使用会引起电子设备的干扰与安全隐患时,请关闭本产品。
- 7.在易燃易燃区域,请关闭本产品,并遵守相关标示说明,以免引起爆炸或火灾。易燃易燃区域包括但不限于:加油站、易燃或化工制品运输及储存设施、有爆炸危险标志的区域、有"关掉双向无线电设备"标志的区域。
- 8.乘坐飞机时,请遵守航空公司有关规定和条例,在飞机起飞前关闭本产品,以免造成安全隐患。


欢迎您使用"SHIDU+®"数码产品!

"SHIDU+®"数码产品将以高科技的品质和服务进入您的工作和生活,您一旦拥有,就会真切地感受到它的卓越性能和优良品质,让您时刻都能享受到生活的轻松愉快。

**产品特点:**

1. 5W输出功率;
2. 支持蓝牙连接与自动回连;
3. 支持TF卡、U盘播放;
4. 支持FM功能;
5. 5C电池 1000mAh;
6. LED显示屏;
7. 内磁喇叭4欧3W;
8. 支持断点续播/智能语音提示。

**按键功能介绍:**

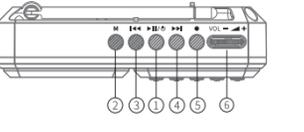


**1.电源开关:** 长按"▶▶▶"键3秒开机语音提示后,显示屏幕常亮表示正常开机,再次长按3秒显示屏幕熄灭表示已关机。  
**播放/暂停:** 在音乐模式下短按"▶▶▶"键为暂停,再次短按为播放。

**2.模式切换:**

- 1.在插入U盘,TF卡时可短按"M"键来对U盘/TF卡/收音模式/蓝牙模式之间的切换。
- 2.在TF卡或U盘模式下长按"M"键显示屏显示"ONE"为单曲循环,再次长按显示屏显示"ALL"为全部循环。
- 3.上一曲:长按"◀◀◀"为快速,短按"◀◀◀"为上一曲
- 4.下一曲:长按"▶▶▶"为快速,短按"▶▶▶"为下一曲

**5.录音:** 插入外接存储器(U盘或是TF卡),短按"●"键屏幕时间开始跳动即表示开始录音;在录音模式下,再次短按"●"键保存并开始播放录音。

**6.音量调节**



**注意:**


- a.在工作时,屏幕电池图标不停的闪烁,表示电力不足,请及时充电;本机充电时间约2-3小时充满;
- b.第一次使用主机时,电池有小部份电量,但是为了达到最好的效果,建议先充满电再使用;

**8.USB接口:** (仅限数据传输读取U盘)

**9.音频输入:** 将机器通过音频线与电脑、手机、MP3、MP4等外接音源连接后,主机屏幕显示"AUX"即可直接播放上述音源。

**10.TF卡接口**

**11.智能数字点歌(选台):**  
在TF卡模式、U盘模式、FM模式点击数字键,可直接选择您想要点播的曲目,有效的提升了曲目选择的便捷性。

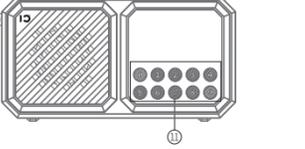

**FM收音:**

**FM收音:** 在开机状态下,短按"M"键调整至FM收音模式,屏幕显示FM电台频率;再长按"M"键进入自动搜台模式;自动搜台完成后,主机自动保存搜索到的广播频道。可通过短按"◀◀◀"或是"▶▶▶"键选择存储的播放频道。




**无线蓝牙操作说明:**

**第一步:** 先将主机开机,按"M"键切换至蓝牙模式,主机会提示"蓝牙已准备好,正在等待配对",同时显示屏上蓝牙图标在不停闪烁;

**第二步:** 打开手机,进入手机的"设置"菜单,找到蓝牙功能选项,打开手机的蓝牙功能,点"扫描"按钮,待搜索到"F5"点击"F5"连接即可;同时,主机会提示配对成功。

**第三步:** 连接成功后,即可通过主机播放手机教学教材,培训资料,歌曲播放等。



**常见问题的解答:**

故障	解决方法
多次连接配对不成功	关闭音箱重新开机 如果您的设备需要通行码,请输入 0000
音乐播放出现断音	连接设备是否超出有效连接距离,或音箱同连接设备之间有障碍物
TF卡出错格式错误	检查TF卡格式是否正确(音箱支持TF卡格式为FAT32)
播放时无声	检查音箱音量是否有调节
无法开机/关机操作无反应	检查音箱是否处于静音或暂停状态 可短按复位键进行复位关机,再长按电源开关键开机后检查性能是否正常。

**产品使用注意事项:**

- 1.符合"微功率短距离无线电发射设备目录和技术要求"的具体条款和使用场景,采用的天线类型和性能,控制、调整及开关等使用方法;
- 2.不得擅自改变使用场景或使用条件,扩大发射频率范围、加大发射功率(包括额外加装射频功率放大器),不得擅自更改发射天线;
- 3.不得对其他合法的无线电台(站)产生有害干扰,也不得提出免受有害干扰保护;
- 4.应当承受辐射射频能量的工业、科学及医疗(ISM)应用设备的干扰或其他合法的无线电台(站)干扰;
- 5.如对其他合法的无线电台(站)产生有害干扰时,应立即停止使用,并采取消除措施后方可继续使用;
- 6.在航空器内和依据法律法规、国家有关规定、标准刻划的射电天文台、气象雷达站、卫星地球站(含测控、测距、接收、导航站)等军民用无线电台(站)、机场等的电磁环境保护区域内使用微功率设备,应当遵守电磁环境保护及相关行业主管部门的规定;
- 7.禁止在以机场跑道中心点为圆心、半径5000米的区域内使用各类模型遥控器;
- 8.微功率设备使用时温度和电压的环境条件。
- 9.制造型号:S611 销售型号: F5 (具体型号以实物为准)

**售后服务条例:**

**一、本公司提供的售后服务方式:**

1. **咨询服务:** 用户在使用产品前,请仔细阅读本产品的使用说明书。在使用过程中遇到问题,均可与当地经销商联系,或致电十度全国统一客服热线: 4008 939 488。
2. **包换服务:** 包换期内(自购机之日起七日内),正常使用出现了非人为故障,请保持产品、配件和包装的外观与完整(若外观损坏,作保修处理),经检测确认故障后,可选择换货或修理,用户可到当地十度委托经销商处联系处理。
3. **保修服务:** 保修期内,正常使用出现了非人为故障,均可享受免费保修服务(主机一年内免费保修,若人为损坏,作收费维修处理)。
4. **收费维修服务:** 产品在购机之日起一年到三年内,出现故障可收费维修,用户需要支付维修所需的元件费、运输费和合理的维修人工费。
5. **以下情况不在三包范围内,本公司可提供有偿服务:**
  - (1) 超过三包期限。
  - (2) 意外因素或人为行为导致的产品损坏(如:未按使用说明书操作、维护或保管,错误安装造成的故障,接入不合适的电源,进水、渗油、摔坏等)。
  - (3) 无有效三包凭证。
  - (4) 因不可抗力如地震、火灾、水灾、雷击等导致的产品故障或损坏。
  - (5) 未经本公司许可,擅自拆卸、修理或改装。
  - (6) 在运输、拆卸过程中造成的故障、损伤。

**注意:**

本手册描述的产品及其附件的某些特征和功能,仅供参考。十度数码科技保留随时修改本手册中任何信息的权利,无需进行任何提前通知且不承担任何责任

**无担保声明:**

本手册中的内容,除非适用法律要求,十度数码科技对本手册中的所有内容不提供任何明示或暗示的保证。在法律允许的范围内,十度数码科技在任何情况下,都不对因使用本手册相关内容而产生的任何特殊的、附带的、间接的、继发性的损害进行赔偿,也不对任何利润、数据、商誉或可预期的损失进行赔偿。

**进出口管制:**

若需将此产品手册中描述的产品出口、再出口、或者进口,您应遵守适用的进出口管制法律法规。

深圳市十度数码科技有限公司 电话: 4008 939 488 深圳 10shidu.com  
Shenzhen SHIDU Digital Co.,Ltd 电话: www.10shidu.com  
地址: 深圳市宝安区新安和新兴工业园2区A8栋十度科技园  
电话: 0755-21635866 传真: 0755-29105099  
本说明所示产品图片及文字功能已详细核对,如出现印刷错误,本公司不承担任何此产生的后果,产品图片及详细功能参数请以实物为准。  
"SHIDU"十度"10"均已注册商标,受知识产权保护,未经本公司允许不得仿冒,违者必究。  
本公司保留对产品更正进行权利,届时恕不另行通知,在法律允许范围内,最终解释权归深圳市十度数码科技有限公司所有。