

# F10说明书 风琴折,尺寸70×105mm

**注意:**  
本手册描述的产品及其附件的某些特征和功能,仅供参考。  
十度数码科技保留随时修改本手册中任何信息的权利,无需  
进行任何提前通知且不承担任何责任。

**无担保声明:**  
本手册中的内容,除非特别说明,十度数码科技对本手册  
中的所有内容不提供任何明示或暗示的保证。

在法律允许的范围内,十度数码科技在任何情况下,都不对因  
使用本手册相关内容而产生的任何特殊的、附带的、间接的、  
继发性的损害进行赔偿,也不对任何利润、数据、商誉或可预  
期的损失进行赔偿。

**进出口管制:**  
若需将此产品手册中描述的产品出口、再出口、或者进口,您  
应遵守适用的进出口管制法律法规。

深圳市十度数码科技有限公司 电话: 4008 939 488  
Shenzhen SHIDU Digital Co.,Ltd. 网址: www.10shidu.com

地址: 深圳市宝安区新和新兴工业园A8栋十度科技园

电话: 0755-21635666 传真: 0755-29105999

本说明书表示产品图及文字已尽详尽时,如出现印刷错误,本公司不承担因此产  
生的后果,产品图及详细功能参数以实物为准。

"SHIDU"十度"及"10"均为注册商标,是知识产权保护,未经本公司允许不得仿冒,违者必究。

本公司保留对产品更正改进的权利,届时恕不另行通知。在法律允许范围内,最终解释权归

深圳市十度数码科技有限公司所有。

## 产品保修卡

购买本产品时,请认真填写此卡,并予以妥善保管。


|          |  |
|----------|--|
| 产品型号:    |  |
| 购买日期:    |  |
| 用 户 名:   |  |
| 用户地址:    |  |
| 联系电话:    |  |
| 经 销 单 位: |  |
| 地 址:     |  |
| 负 责 人:   |  |
| 联 系 电 话: |  |
| 签 章:     |  |

Welcome to use SHIDU Bluetooth speaker.In your  
spare time, you can enjoy fantastic music in home  
coffee house and even trip. Enjoy non-stop music  
anytime anywhere.SD-F10 Bluetooth Speaker is  
the best choice for you.  
Please read the instruction carefully before using it

### Features:

- 1.15W output power;
- 3. Support TF card and USB playback;
- 4. 3.7V 4400mAh battery;
- 5. 4Ω round 16-core internal double magnetic rubber  
edge speaker\*2;
- 6. 2.4G wireless karaoke, rechargeable microphone;
- 7. Support breakpoint resume/intelligent voice  
prompt.

### Function Illustration:

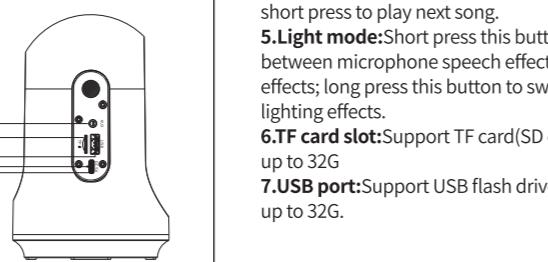

**1.Power on/Power off:**  
a.Press and hold the the "M" button for 3 seconds to turn on the speaker. Press and hold the "M" button again for 3 seconds to turn off the speaker.

### 9.DC 5V Charging port 10.Charging indicator

**2.Mode button:**

- a.Short press the "M" button to select the following modes:USB flash drive mode,TF card mode,Bluetooth mode,AUX mode.
- b.When playing music on TF card/USB flash drive, long press it for 3 seconds to switch to single song repeat .Long press it again to switch back to all repeat.

**3.Volume - /Previous:** Long press "++" for volume down,short press to play previous song.

**4.Volume/Next:** Long press "++" for volume up, short press to play next song.

**5.Light mode:** Short press this button to switch between microphone speech effects and singer effects; long press this button to switch between lighting effects.

**6.TF card slot:** Support TF card(SD card), maximum up to 32G


**7.USB port:** Support USB flash drive play, maximum up to 32G.

**8.AUX input:** Connect the speaker with Mobile phone,computer,MP3,MP4 via audio cable to play audio.

### 9.DC 5V Charging port 10.Charging indicator

**11.Charging indicator:**

Please charge through USB Type-C charging cable with DC 5V adapter. The red indicator light will keep on when charging, and it will go out after fully charged.  
The charging time is normally 6-8 hours, unplug the charger as soon as it is fully charged.  
**Note:** The speaker comes with a built-in charging cable. Please choose a high-quality power adapter to charge it. It can be charged with an Android phone charger (5V 1.5A power adapter) after being charged.

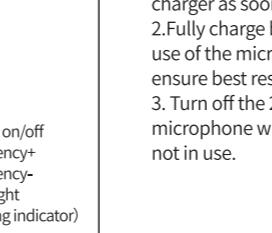

**12.Bluetooth Function:**  
1.While powered on, short press "M" button to switch to Bluetooth mode. A voice will prompt "Bluetooth is waiting for connection" indicating that the speaker is in Bluetooth pairing mode .  
2.Open your device's Bluetooth menu, then search for "F10" and select it to pair. Bluetooth pairing is complete with a voice prompt "Bluetooth is connected".


### Microphone charging:

When the microphone's blue indicator light flashes, battery is low. Please turn it off and charge through USB cable with DC 5V adapter. The red indicator light will be on at the time when charging, and it will turn off when the mic is fully charged.

**13.2.4G Wireless microphone instruction:**  
**1.Power on/off:**

a.Long press "M" for 3 seconds to turn it on, the blue indicator will on. Long press "M" for 3 seconds to turn it off, the blue indicator will go off.

b.When using, short press "M" to mute the microphone, short press "M" again to turn off the microphone mute function.

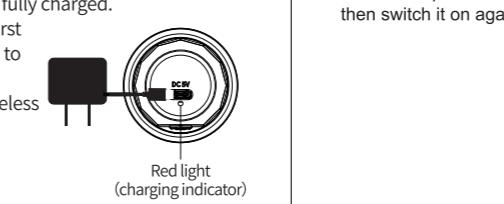

**14.Trouble shooting:**  
**Can't pair successfully after several attempts:**  
1.Switch off the speaker and switch it on again;  
2.If a password is needed, please enter 0000.

### The music is staccato when playing:

1.Please check whether the distance beyond the effective range (normally 8-10M) or not;  
2.Clear the barriers between the device and speaker.

### There are problems with TF card playing:


1.The supported maximum capacity of TF card is 32G;  
2.The audio formats should be WAV/MP3.

### No sound when playing:

Please check whether or not the speaker is paused or in minimum volume state.

### Can't switch on/off and no response for any operation:

Reset the speaker with a thin and long metal needle, then switch it on again.



## 蓝牙音响 使用说明书 USER MANUAL



关注十度微信公众号  
回复型号" F10 "  
获取产品使用说明书

### 安全警告:

1.请勿将产品及配件靠近火源或任何过热的环境中。

2.请勿将产品及配件接触水及湿气,不要在靠近水的地方使  
用本设备,也不要将产品浸入任何液体中,避免产品及配件受  
到水滴或水溅。

3.请勿自行打开或任意拆解、维修电池组件,如果电池更换不  
当会有爆炸危险,严禁将电池投入水、火中或靠近任何过热  
的环境中。

4.本产品由外接电源适配器(5V 1.5A电源)充电后使用,充完  
电后可方便的通过拔掉电源适配器插头断开电网电源,充  
电时请将产品放置于空旷区域充电,远离易燃物品,请勿边  
充电边使用。

5.当用户暂不使用本产品时,请将产品"电源开关"关闭(参见  
产品操控示意图),避免电池电量的流失。

6.当禁止使用无线设备或设备的使用会引起电子设备的  
干扰与安全隐患时,请关闭本产品。

7.在易燃易爆区域,请关闭相关示标说明,以免  
引起爆炸或火灾。易燃易爆区域包括但不限于:加油站、易  
燃或化工制品运输及储存设施、有爆炸危险标志的区域、有  
"关掉双向无线电设备"标志的区域。

8.乘坐飞机时,请遵守航空公司的有关规定和条例,在飞机起飞  
前关闭本产品,以免造成安全隐患。

9.电源线不能被挤压、拉扯、弯曲、打结、悬挂重物或被人践  
踏。以防止电源线的绝缘层被损坏导致触电。

10.如机器发生冒烟或其他异常现象,请迅速拔出电源插头,避  
免引起意外事故,并联系当地经销商进行维修。


### 欢迎您使用" SHIDU + "数码产品!

"SHIDU + "数码产品将以高科技的品质和服务进入您的  
工作和生活,您一旦拥有,就会真切地感受到它的卓越性  
能和优良品质,让您时刻都能享受到生活的轻松愉快。

### 产品特点:

- 1.15W输出功率;
- 3.支持TF卡、U盘播放;
- 4.3.7V 4400mAh电池;
- 5.4Ω圆形16芯内双磁橡胶边喇叭\*2;
- 6.2.4G无线K歌,充电式话筒;
- 7.支持断点续播/智能语音提示;

### 按键功能介绍:

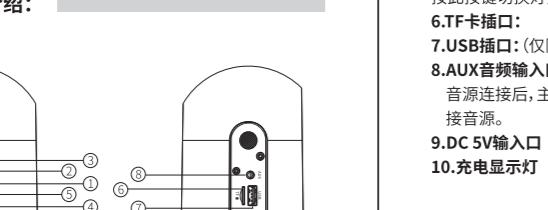

### 1.电源开关机按键:

a.长按3秒开机语音提示后,表示正常开机,再次长按  
"M"键3秒关机。

### 2.模式切换:

a.短按此按键可进行菜单选择,用来切换U盘播放、TF卡播  
放、音频输入模式、蓝牙模式。

b.在音乐模式下长按"M"键为单曲循环,再次长按"M"键为  
全部循环。

c.音量减/-/上一曲:在音乐模式下,长按"++"为音量减,短按  
为上一曲。

d.音量加/+下一曲:在音乐模式下,长按"++"为音量加,短按  
为下一曲。

### 3.灯光按钮:

短按此按键切换话筒演讲特效跟唱跟特效;长  
按此按键切换灯光效果。

### 4.TF卡插口:

(仅限数据传输读取U盘)

### 5.UAUX音频输入口:

将主机通过音频线与电脑、手机等外接  
音源连接后,主机提示"音频输入",即可直接播放上述外  
接音源。

### 6.9.DC 5V输入口

10.充电显示灯

### 蓝牙操作说明:

**第一步:机器开机,主机提示"蓝牙已准备好,正在等待配对"**  
时为蓝牙模式。

### 第二步:

打开手机,进入手机的"设置"菜单,找到蓝牙功能选  
项,打开手机的蓝牙功能,点"扫描"按钮,待搜索到  
"F10"点击"F10"连接即可。

### 第三步:

连接成功后,主机提示"蓝牙已配对",即可通过F9播  
放手机教学教材、培训资料、歌曲播放等。同时也可  
以与无线话筒配合使用,实现诗歌朗诵,通过手机K歌  
软件实现同步K歌等功能。

### 4.充电:

在工作状态下,当主机提示"电池电量不足请充  
电"时,使用随机配送的USB充电线连接主机与电源,充  
电时红色指示灯亮,充满电后红色指示灯灭。

### 5.灯光按钮:

在工作状态下,当主机提示"电池电量不足请充  
电"时,使用随机配送的USB充电线连接主机与电源,充  
电时红色指示灯亮,充满电后红色指示灯灭。

### 6.2.4G无线话筒简要说明:

在使用时如果闻到啸叫或2.4G无线话筒声音量小,调节2.4G  
无线话筒的音量,"-"键是音量减, "+"键是音量加。

### 7.2.4G无线话筒音量调节:

在使用时如果闻到啸叫或2.4G无线话筒声音量小,调节2.4G  
无线话筒的音量,"-"键是音量减, "+"键是音量加。

### 8.主要技术规格:

产品型号: F10  
失真度: ≤1%  
频率响应: 40Hz-18KHz  
额定功率: 15W  
信噪比: ≥80dB  
输入规格: 5V±1.5A

### 9.故障自我检查:

8.请勿推拉、搬动或者踩踏本产品,请勿擅自拆解本产品,否  
则不能享受本公司的免费保修服务。

### 10.咨询服务:

用户在使用本机过程中,如发现有问题,请按下面的故障检修  
表逐一检查,仍然不能解决问题,请找本公司在当地的服务商  
或拨打本公司的客服热线咨询,故障检修表具体详见下  
表所示:

### 2.4G 无线话筒简要说明:

**2.4G无线话筒开/机关:**  
长按"U"3秒蓝色指示灯亮,表示已开机;再次长按3秒蓝色  
指示灯熄灭,表示已关机。在使用话筒时短按"U"键,是话筒静  
音,再次短按"U"键,是关闭话筒静音。

### 3.连接:

自动配对:先把2.4G无线话筒  
开机,此时蓝色指示灯闪烁表  
示已开机,在使用话筒时短按  
"U"键,是话筒静音,再次短按  
"U"键,是关闭话筒静音。

### 4.通话:

在通话时,如果将话筒放在嘴  
正面前方1-2CM处对准嘴头发  
音,若有啸叫,可适当调小音量或  
将话筒与嘴头的距离稍微拉开,以  
防互相干扰;

### 5.录音:

录制时请将话筒放在嘴  
正面前方1-2CM处对准嘴头发  
音,若有啸叫,可适当调小音量或  
将话筒与嘴头的距离稍微拉开,以  
防互相干扰;

### 6.充电:

在充电时如果闻到啸叫或2.4G无线话  
筒声音量小,调节2.4G无线话  
筒的音量,"-"键是音量减, "+"键是音量加。

### 7.故障排除:

在使用时如果闻到啸叫或2.4G无线话  
筒声音量小,调节2.4G无线话  
筒的音量,"-"键是音量减, "+"键是音量加。

### 8.主要技术规格:

产品型号: P9 MINI  
失真度: ≤1%  
频率响应: 40Hz-18KHz  
额定功率: 15W  
信噪比: ≥80dB  
输入规格: 5V±1.5A

### 9.故障排除:

在使用时如果闻到啸叫或