注意：
本手册描述的产品及其附件的某些特征和功能，仅供参考。
十度数码科技保留随时修改本手册中任何信息的权利，无需进行任何提前通知且不承担任何责任。

无担保声明：
本手册中的内容，除非适用法律要求，十度数码科技对本手册中的所有内容不提供任何明示或暗示的保证。
在法律允许的范围内，十度数码科技在任何情况下，都不对因使用本手册相关内容而产生的任何特殊的、附带的、间接的、继发性的损害进行赔偿，也不对任何利润、数据、商誉或可预期的损失进行赔偿。

进出口管制：
若需将此产品手册中描述的产品出口、再出口、或者进口，您应遵守适用的进出口管制法律法规。

深圳市十度数码科技有限公司 地址:深圳市宝安区新和街兴立会展区A4栋十度科技园
Shenzhen SHIDU Digital Co .Ltd 电话07755－21635866 传真07755－29105099
客服热线：**4008 939 488**
官方网站 **WWW.10SHIDU.COM**
本说明书所示产品图片及文字仅做功能说明使用，如出现印刷错漏，本公司不承担因此产生的后果。
产品图片含有的部分素材来源于网络下载。
SHIDU十度商标及LOGO均已注册，受知识产权保护，未经本公司允许不得仿冒、违者必究。
本公司保留对产品更改及改进的权利，届时恕不另行通知，恕无法单方面服务，最终解释权归深圳市十度数码科技有限公司所有。

Welcome to use SHIDU portable speaker. For better experience the product, please read the instruction carefully before use.

Features:
1.Output power 25W;
2.3.7V 2*2000mAh A-grade lithium battery;
3.Support Bluetooth 5.0;
4.Support TF card/USB flash drive playback;
5.Support FM radio/Recording/True Wireless Stereo (TWS function);
6.UHF wireless microphone, stable signal and clear sound, (Only UHF wireless version)

Function illustration:

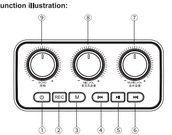

1.Power ON/OFF: Long press it three seconds to turn on, the display screen will light on. Long press it again for three seconds to turn off, the display screen will go off.

2.Recording
3.Mode selection:
a.Short press "M" to select TF card mode/USB flash drive mode/Bluetooth mode/FM mode/UHF mode（Wireless version only).
b.In music play mode, long press "M" for 3 seconds to switch to single song repeat. The screen will display "ONE", long press "M" key again to switch back to all repeat and the screen will display "ALL".
4,Previous: Short press " ⏮ " to select previous audio file, Long press to fast rewinding.
5.Play/Pause:
a.In music play mode, short press it to pause; short press it again to play;
b.In any mode, double press the " ⏯ " button to close the voice prompt of the speaker, and double press the " ⏯ " button again to turn on the voice prompt of the speaker.
6.Next: Short press " ⏭ " to select next audio file. Long press to fast forward.
7.Music volume: Rotate the knob clockwise to "+" to continuously increase the music volume; rotate the knob to "-" to decrease the music volume.
8.MIC volume: Rotate the knob clockwise to "+" to continuously increase the MIC volume; rotate the knob to "-" to decrease the MIC volume.
9.ECHO



10.DC 5V: Please use the DC 5V⎓2A power adapter to charge the speaker.
11.TF card slot: Support TF card play, with a voice prompt "TF card playing", Maximum support 32GB TF card with MP3 / WAV / WMA format.
12.USB port: Support USB flash drive play, with a voice prompt "USB flash drive playing", Maximum support 32GB USB flash drive with MP3 / WAV / WMA format.
13.AUX port
14.MIC jack: Insert the wired microphone with Ø3.5mm plug (The standard package don't include wired microphone).

TF card/USB flash drive function instruction:
Insert the TF card/USB flash drive, switch to TF card mode/ USB mode.Then short press play key to play the audio files in TF card/USB flash drive.



Loop:
When playing audio on TF card/USB flash drive, long press "M" key for 3 seconds to switch to single song repeat. The screen will display "ONE", long press "M" key again to switch back to all repeat and the screen will display "ALL".
Note: The default on powering up is all repeat.

Recording Function:
To record:
1.Connected the wireless or wired microphone, then insert the storage (USB flash drive or TF card).
2.Long press "REC" key to start recording, the display will indicate the time. Short press "REC" key again to stop recording, it would save the audio file and play the recording.

To play a recording:
Insert a USB flash drive or TF card with recording files. Short press "REC" key to play back recordings. It will play the last recording by default. Short press " ⏮ " or " ⏭ " to select the previous and next recordings.

FM Function:
Switch on the speaker, short press "M" to choose the FM mode with the screen showing radio frequency; Long press " ⏭ " to enter into automatic channels searching, after searched successfully, the device will save the channel automatically, Please press " ⏮ " or " ⏭ " to choose the saved channels.

Bluetooth Function:
Step 1: Switch on the speaker and press "M" to enter into Bluetooth mode. (The Bluetooth mode is ready with voice prompt "Bluetooth is waiting for connection" and " bLUE " on the screen keep flashing.)
Step 2: Turn on the Bluetooth function of your mobile phone and search "S95". Click and it will be connected successfully with a voice prompt "Bluetooth is connected".
Step 3: After successful connection, it's can play the audio files. Please keep the speaker and the Bluetooth devices close for stable signal.

True Wireless Stereo function:
Step 1: Switch on two speakers and both short press "M" switch to Bluetooth mode, Long press "M" of one speaker to enter into pairing status, when Bluetooth icon of another speaker stop flashing, which means this two speaker connected successfully.
Step 2: Turn on the Bluetooth function of your device and search"S95", Click and it will be pair successfully, Two devices will play simultaneously.
Step 3: Long press "M" of one speaker to exit this function.

About Charging:
a.When working, the battery icon on the screen flash continuously, indicating that the battery is low, please charge it in time. Please use the standard adapter, the other end connects with the power supply DC 220V to charge. Please unplug the adapter timely after fully charged, the charging time is normally 5~6 hours.
b.In order to achieve the best effect when using the speaker for the first time, it is recommended to be fully charged before use.
c.Please use the standard 5V 1.5A charger to charge the device.



Pairing & usage of U5 hand-held UHF wireless microphone: (Limited to wireless version)



1,Turn on/off:
a.Long press "⏻" to turn on, and the blue light will long light;
b.In "power on" status, long press "⏻" to turn off, and the blue light will go out.

2.UHF frequency pairing:
a.Turn on the UHF wireless voice amplifier, then long press "M" key for 3 seconds with voice prompt "UHF is waiting for connection", which means the device has enter into the UHF wireless pairing status;
b.Turn on the U5 hand-held UHF wireless microphone, then short press the "⏻" three times quickly and it will be pair successfully with voice prompt "UHF is connected". And you can begin to speak.

3.Charge the hand-held microphone:
The hand-held microphone is low battery when its red indicator light is keeping flashing and please charge it timely.

Please use the DC 5V adapter with Micro USB cable to charge the microphone, The red indicator light will light on when charging, and it will go off after fully charged.

Wireless Microphone Technical Parameters:

Frequency response:	30Hz-20KHz	Moving-coil:	Omnidirectional
Sensitivity:	-45dB±1dB (0dB=1V/Pa)	Recharging voltage:	DC 5V 500mAh
Working time:	8-10 hours	Charging time:	3-5 hours

S95 Speaker Specification:

Power output:	≤25W	Frequency response:	50Hz-18KHZ
Distortion:	≤5%	Impedance:	4Ω
S/N ratio:	≥70db	Charging voltage:	DC 5V 1.5A

SHIDU Guarantee:
100% SHIDU Guaranteed Product Satisfaction.
We promise 1 year warranty.
If you have any questions, please feel free to contact us, we will try our best to provide you the best service.
www.10shidu.com Email:service@10shidu.com

SHIDU

原声手提音响
使用说明书
USER MANUAL

关注十度微信公众号
回复型号"S95"
获取设备使用教程

安全警告：
1. 请勿将产品及配件靠近火源或任何过热的环境中。
2. 请勿将产品及配件接触水及潮气，不要在靠近水的地方使用本设备，也不要将产品浸入任何液体中，避免产品及配件受到水溅或水漫。
3. 请勿自行打开或任意拆解、维修电池组件，如果电池更换不当会有爆炸危险，严禁将电池投入水、火中或靠近任何过热的环境中。
4. 本产品由外接电源适配器（5V 1.5A电源）充电后使用，充完电后可方便的通过拔掉电源适配器插头断开电网电源。
5. 当用户配不间断电力系统时，请将产品电源开关旋转至关闭状态关闭电源（参见产品提供示意图），避免电池电量的流失。
6. 当禁止使用无线设备或设备的使用会引起电子设备的干扰与安全隐患时，请关闭本产品。
7. 在易燃易爆区域，请关闭本产品，并遵守相关标示说明，以免引起爆炸或火灾。易燃易爆区域包括但不限于：加油站、易燃或化工制品运输及储存设施。有爆炸危险标志的区域，有"关掉双向无线电设备"标志的区域。
8. 乘坐飞机时，请遵守航空公司有关规定和条例，在飞机起飞前关闭本产品，以免造成安全隐患。

主要功能特点：
1.25W功率,配置4寸全频喇叭;
2.UHF无线MIC(出功能仅对无线版本有效）;
3.蓝牙5.0，音乐在线播放功能;
4.3.7V 2*2000mAh A级动力电池,保用三年;
5.支持TF卡,U盘播放功能;
6.支持即时调节功能，FM一键收音;
7.TWS蓝牙串联功能。

数据参数：

输出功率:	25W	频率响应：	50Hz-18KHz
噪听混比：	4Ω	失 真 度：	≤5%
信 噪 比：	≥70dB	输入规格：	DC 5V⎓1.5A

面板功能说明：

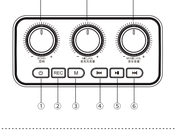

1.电源开关: 长按"⏻"键3秒开机语音提示后，显示屏幕常亮表示正常开机，再次长按3秒显示屏幕熄灭表示关机。
2.录音/播放按键
3.输入选择：
①短按此按键可进行菜单选择，用来切换蓝牙模式,U盘播放,TF卡播放,收音模式,UHF模式。
②在音乐播放模式下长按"M"键显示屏显示ONE为单曲循环,再次长按"M"键显示屏显示ALL为全部循环。
4.上一曲按键
5.播放/暂停键：
①在音乐模式下短按" ⏯ "键为暂停,再次短按为播放;
②在任何模式下双击" ⏯ "键是关闭语音提示音,再次双击" ⏯ "键是打开关机语音提示音。
6.下一曲按键
7.音乐音量：可调节音乐播放声音大小。
8.麦克风音量：可调节话筒音量大小，使话筒声音合适。
9.混响调节: 可调节话筒混响,使话筒效果更佳。

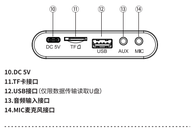

10.DC 5V
11.TF卡接口
12.USB接口 (仅限数据传输读取U盘)
13.音频输入接口
14.MIC麦克风接口

1.电源开关: 长按"⏻"键3秒开机语音提示后，显示屏幕常亮表示正常开机，再次长按3秒显示屏幕熄灭表示关机。
2.录音/播放按键
3.输入选择：
①短按此按键可进行菜单选择，用来切换蓝牙模式,U盘播放,TF卡播放,收音模式,UHF模式。
②在音乐播放模式下长按"M"键显示屏显示ONE为单曲循环,再次长按"M"键显示屏显示ALL为全部循环。
4.上一曲按键
5.播放/暂停键：
①在音乐模式下短按" ⏯ "键为暂停,再次短按为播放;
②在任何模式下双击" ⏯ "键是关闭语音提示音,再次双击" ⏯ "键是打开关机语音提示音。
6.下一曲按键
7.音乐音量：可调节音乐播放声音大小。
8.麦克风音量：可调节话筒音量大小，使话筒声音合适。
9.混响调节: 可调节话筒混响,使话筒效果更佳。



10.DC 5V
11.TF卡接口
12.USB接口 (仅限数据传输读取U盘)
13.音频输入接口
14.MIC麦克风接口

TF卡/U盘功能说明：
按照主机标识的方向将TF卡/U盘正确插入主机TF卡/U盘槽后，主机将自动播放TF卡/U盘中的音乐文件,同时可通过操作上一曲、下一曲键或者数字选曲键选择自己喜欢的曲目。

无线蓝牙操作说明：
第一步:先将主机开机,按"M"键切换至蓝牙模式,主机会提示"蓝牙已准备好",正在等待配对",同时显示屏上蓝牙图标在不停闪烁；
第二步:打开手机，进入手机的"设置"菜单,找到蓝牙功能选项,打开手机的蓝牙功能,点"扫描"按钮,待搜索到"S95"点击"S95"连接即可,同时,主机会提示配对成功。
第三步:连接成功后,即可通过主机播放手机教学教材,培训资料,歌曲播放等。

双机TWS蓝牙互连功能：
第一步:将两台主机同时开机，并按"M"键切换到蓝牙模式，长按其中的一台主机"M"键进入等待状态,连接成功后另一台主机蓝牙图标停止闪烁，表示两台主机蓝牙相互串联成功；
第二步:手机连接蓝牙功能,进入手机"设置"菜单,找到蓝牙功能选项,打开手机的蓝牙功能,点"扫描"按钮,待搜索到"S95"点击"S95"连接即可,同时,主机会提示"蓝牙已连接"。
第三步:可通过主音"M"键，进出TWS互连功能。

FM收音功能：
在开机状态主机同时开机，按短"M"键调整至FM收音模式,此时屏幕显示FM电台频率;再长按" ⏭ "键进入自动搜台模式;自动搜台后另一台主机显示搜索数字的广播频道,可通过短按" ⏮ "或者" ⏭ "键选择储存的FM频道值。

录音功能说明：
1.连接话筒，在任意模式下插入外接存储器（U盘或是TF卡），长按"REC"键屏幕时间开始跳动即表示开始录音；在录音模式下，短按"REC"键即可开始播放录音。
2.在音乐模式下，如果外接存储器里有录音文件，短按"REC"键进入播放录音状态,默认播放顺序为最后一个录制音频为当前录音播放,在此状态可以通过上一曲" ⏮ "键或下一曲" ⏭ "来选择录音播放文件。

为主机充电：
当主机低电时,将随机配的USB充电线连接主机DC 5V插口,另一端连接5V电源适配器再接至电源（220V）插座充电,充电时电量指示图标的电量格闪动且逐个增加,充满电后,电池图标长亮。

注意：
a.在工作时,屏幕电量指示图标不停的闪烁，表示电力不足，请及时充电;本机充电时间约5-6小时充满;
b.第一次使用主机时,电池有小部份电量,但是为了达到最好的效果,建议先充满电再使用。

UHF无线麦克风操控示意图：(仅限UHF无线版)



UHF无线手持麦克风开/关机：
长按" ⏻ "键,蓝色功能指示灯长亮,进入开机状态;在开机状态下,长按" ⏻ "键,蓝色功能指示灯熄灭,进入关机状态。

UHF无线手持麦克风配对：
打开主机UHF无线功能后,将主机"设置"菜单,找到蓝牙功能选项,打开手机的蓝牙功能,点"扫描"按钮,待搜索到"S95"点击"S95"连接即可,同时,主机会提示配对成功。

UHF无线手持麦克风充电：
当无线麦克风红色指示灯不停的闪烁时，表示无线麦克风电池低电，请及时充电,将手持麦克风DC 5V接口连接数据线麦已USB接头，另一端数据线USB接头与DC 5V的USB电源接口连接；充电时无线麦克风红色指示灯长亮，充满电后红色指示灯熄灭。

注意：在使用过程中出现指示灯红灯闪烁，表示电力不足，请及时充电；充电时请关机再充电,充满电后请及时拔掉充电线座断开电网电源。

遥控功能说明：(标配不含遥控器，需另外选购)
1.在正常情况下，遥控器应该在接收设备的5m，30度范围内使用；
2.操作遥控器时，将遥控器对准机器的遥控窗口，遥控器与机器之间不应有障碍物；
3.如果遥控接收器处于直接接收强光照射的位置遥控器可能失效,在此情况下,请将机器移开,以避免直接照射；
4.避免新旧电池混合使用,定期检查遥控器电池是否更换。

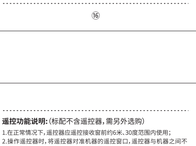

故障自我检查：
用户在使用本机过程中,如发现有问题,请按下面的故障检修表逐一检查,仍然不能解决问题,请找本公司在当地的经销服务商或就近本公司的客服热线咨询,故障检修表具体详见下表所示：

故障现象	可能原因	处理方法
开不机或关机后不响应	1. 电池没电 2. 电池正负极接反 3. 音量调节至最小位置	1. 给电池充电 2. 按照电池仓内的极性标示重新安装电池 3. 适当调节音量
声音失真	1. 音量调节过大 2. 音源信号过强	1. 适当降低音量 2. 检查音源输出是否正常，若异常，维修音源
卡住 OK 灯亮	1. 音源输出信号异常 2. 功放电路故障	1. 检查音源输出是否正常，若异常，维修音源 2. 送回本公司维修
MP3 无声	1. 音量调节过小 2. 音源输出信号异常 3. 功放电路故障	1. 适当调节音量 2. 检查音源输出是否正常，若异常，维修音源 3. 送回本公司维修
有线无线话筒均无声音	1. 电池没电 2. 电池未装好 3. 有线麦克风接口断开	1. 给电池充电 2. 重新装好电池 3. 检查麦克风接口是否连接好
无线话筒无声音	1. 电池没电 2. 电池未装好 3. 无线麦克风未开机	1. 给电池充电 2. 重新装好电池 3. 检查麦克风是否开机

售后服务条例：
一.本公司提供的售后服务方式：
1.咨询服务：用户在使用产品前，请仔细阅读本产品的使用说明书,在使用过程中遇到问题,均可与当地经销商联系，或致电十度全国统一客服热线**4008 939 488**。
2.包换服务：包换期内(自购机之日起7天内)，正常使用出现非人为故障，请保持产品、配件和包装的外观与完整(若外观损坏,恕不提供包换)，经检测确认故障后，可选择换货或维修，用户可到当地十度各经销商联系处理。
3.保修服务：保修期内,正常使用出现了非人为故障,均可享受免费保修服务(主机一年内免费保修,若人为损坏,作收费维修处理)。
4.收费维修服务：产品在购机之日起一年到三年内,出现故障可收费维修,用户需要至少维修所需的分件费，运输费和全部的维修人工费。
5.以下情况不在三包范围内,本公司可提供有偿服务：

(1).超过三包期限；
(2)、意外因素或人为行为导致的产品损坏（如:未按使用说明书操作、维护或保管，错误安装造成的故障，插入不合适的电源、进水、摔落，摔坏等）；
(3)、无有效三包凭证；
(4)、因不可抗力如地震、火灾、水灾、雷击等导致的产品故障或损失；
(5)、未经本公司许可,擅自拆卸、修理或改装；
(6)、在运输、搬卸过程中造成故障,损伤。

二.关于售后服务的说明：
1.购机日期以本凭证为准,不能有效证明的，以生产日期为准；
2.质量问题不包括用户个人对音质、音色等主观异议,不作为退换货的条件；
3.配件,外壳,说明书,包装不在保修服务范围内；
4.对已停产型号产品的服务，本公司仅做功能性修复（外观可能与原产品有异）；
5.经销商向您做出的非本公司保证的其他承诺,本公司不承担任何责任；
6.用户在保管服务之前,请将重要资料另行备份或记录,因维修或其他任何原因造成的任何损失,本公司概不负责,因保管不善等原因将机内资料泄露给第三者传递或者损坏的系统(如:银行账号、密码、资料被更改等),本公司也概不负责；
7.在免费保修期内,本公司或授权服务机构拥有更换后的故障的所有仪及处置权。
8.使用本产品前,请仔细阅读本产品的使用说明书,并妥善保存购机凭证,本三包凭证内容解释权归属深圳市十度数码科技有限公司所有,如有变动,恕不另行通知。
9.使用本产品后,请仔细阅读本产品的使用说明书,并妥善保存购机凭证,本三包凭证内容解释权归属深圳市十度数码科技有限公司所有,如有变动,恕不另行通知。

客服服务时间:每周一至周六9:00-18:00 (法定节假日除外)
全国统一服务热线:4008 939 488 公司网址：www.10shidu.com

产品保修卡

购买产品时，请认真填写此卡，并予以妥善保存。

用户档案

用户姓名	
性别	
通讯地址	
邮编	
联系电话	
购买地点	
购买日期	
品名及规格	
销售单号	
机身编号	
经销商签名	
用户签名	

经销商盖章处