M801折页说明书,折页方式:风琴折

封面↓

产品保修卡

购买产品时，请认真填写此卡，并予以妥善保存。

用户档案

用户姓名	
性别	
通讯地址	
邮编	
联系电话	
购买地点	
购买日期	
品名及规格	
销售单号	
机身编号	
经销商签名	
用户签名	

经销商盖章处

产品保修须知：

为了让您更好的享受我公司的各项服务，请详细阅读以下内容：十度数码科技产品的保修服务由全国各地的十度数码授权技术服务中心负责提供。本产品自销售之日起计保修期和“三包”有效期，在“三包”有效期内，正常状态下使用本产品而发生故障，可依据“三包”规定予以维修、更换、退货。在产品保修期内，可收照本保修条款的内容，在十度数码授权技术服务中心享受无偿维修服务（随机附件不在保修范围内）。本品保修期限规定为一年。

在保修期（含“三包”有效期）内以下情况将实施有偿维修服务，同时不享受“三包”服务：

1）不能出示有效保修卡原件和有效发票。

2）购买产品日期、销售单位名称（盖章有效）等项目未能完整填写或涂改保修卡。

3）由于不可抗拒的自然灾害造成的故障、损伤。

4）在运输、搬卸过程中造成的故障、损伤。

5）由于未能按照《产品使用说明书》上所写的使用方法和注意事项操作而造成的人为故障。

6）未经本公司授权地进行的产品拆卸、维修、改装而造成的故障。

需要保修时请将机器与本保修卡（原件）及购机凭证（复印件）一起送往十度数码科技有限公司授权技术服务中心，运输费由用户承担。

Please read the instruction carefully before using it.

Note:

Before turn on the amplifier, ensure that the MIC don't point at the amplifier, this will eliminate any annoyance associated with howling. For ensure better amplification, aim at the headset MIC capsule when speaking, and keep the distance between the voice amplifier and the MIC more than 60 cm to avoid howling.

Simply tucking the speaker around waist, and mounting headphone over head can help to achieve the required distance.

Specification:

Max output power:	10W	Frequency response:	100Hz-18KHz
Distortion:	≥80db	Work temperature:	-10°C-45°C
Charging voltage:	DC 5V 1.5A	Amplify time:	6-8 hours
Music•play time:	6-8 hours	Charging time:	3-4 hours

Features:

1.SHIDU patented appearance;

2. Stylish, ergonomic and comfortable design;

3.10W power output;

4.Support TF card and USB flash drive music playback;

5. Support Bluetooth 5.0;

6.Support Recording.

Function Illustration:

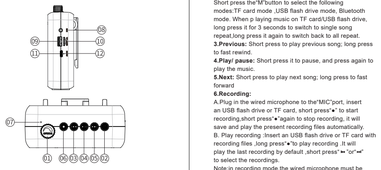

Power switch and volume control:

Turn the switch knob to the "ON" direction.When you hear a"click" sound, the blue indicator light will turn on, indicating that the device has been turned on; Simultaneously turning to the "ON" direction increases the volume, while turning to the "OFF" direction decreases the volume; Turn the switch knob to the "OFF" position. When you hear a "click" sound the blue indicator light goes out, indicating that the machine is turned off.

2.Mode:

Short press the"M"button to select the following modes:TF card mode ,USB flash drive mode, Bluetooth mode. When p laying music on TF card/USB flash drive, long press it for 3 seconds to switch to single song repeat,long press it again to switch back to all repeat.

3.Previous: Short press to play previous song; long press to fast rewind.

4.Play/ pause: Short press it to pause, and press again to play the music.

5.Next: Short press to play next song; long press to fast forward

6.Recording:

A.Plug in the wired microphone to the"MIC"port, insert an USB flash drive or TF card, short press"●" to start recording,short press"●"again to stop recording. it will save and play the present recording files automatically.

B. Play recording: Insert an USB flash drive or TF card with recording files ,long press"●"to play recording .It will play the last recording by default ,short press" ●" or" ●" to select the recordings.

Note:in recording mode,the wired microphone must be plugged in for proper recording.

7.MP3 mode indicator

8.Microphone Jack: Insert the wired microphone into this socket to amplify voice.

9.USB port: Insert the USB flash drive to play audio, the maximum capacity is 32GB.

10.TF card slot: Insert the TF card to play audio, the maximum capacity is 32GB.

11. DC 5V charging port :

Please charge through Type-C charging cable with DC 5V output adaptor. The red indicator light will keeps on when charging,and it will go out after fully charged. Unplug the charger as soon as it is fully charged.(the charging time is about 3~4 hours)

Warning: do not connect the laptop's USB port to charge the speaker.

Bluetooth Function:

1.While powered on, short press"M"button to switch to Bluetooth mode with blue light flashing indicating that the speaker is in Bluetooth pairing mode .

2.Turn on your device's Bluetooth function,then search for "M801" and select it to pair. Bluetooth pairing is completed with Blue light stop flash.

When playing music, please keep the speaker close to the device to maintain a stable connection.



2.4G Wireless microphone instruction:

1.Power on/off: Turn the power switch to the "ON" position to turn it on, turn the power switch to the "OFF" position to turn it off.

2.Auto pairing: Turn on the speaker first,then turn on the 2.4G wireless microphone.When the blue light on the microphone stops flashing, it means pairing is successful.

3.Volume control:if speaker howling or in a small volume, adjust the volume by pressing "+" or "-" on the wireless microphone.



Microphone charging:

When the blue light of the microphone flashes rapidly, it means low battery. Please charge through Type-C charging cable with DC 5V output adapter. The red indicator light will keep on when charging; and it will go out after fully charged. Unplug the charger as soon as it is fully charged.

Notes:

1.The normal charge time is 2~4 hours,unplug the charger as soon as it is fully charged.

2.Fully charge before first use of the microphone to ensure best results.

3.Turn off the 2.4G wireless microphone when not in use.

4.Warning:do not connect the laptop's USB port to charge the microphone.

Wireless microphone instruction:

1.Power on/off: Press the " ⏻ " for 3 seconds to turn it on,the green indicator will turn on.Press it again for 3 seconds to turn it off,the green indicator will goes out.

2.Manual pairing:(This operation is used for microphone is no sound)

Step 1: Power on the speaker.Long press the "M" key for 3 seconds,it will prompt sound that it has entered the wireless pairing state .

Step 2: Turn on the wireless microphone.Press and hold on the "⏻" key for 3 seconds on wireless microphone , The green indicator light stops flashing, indicating that pairing is successful and you can try speaking.

Notes: if Pairing not success.

Please turn off both speaker and microphone, and power on them try above manual pairing again.

3.Volume control: If speaker howling or in a small volume,adjust the volume by pressing"+" or "-" on the wireless microphone.

4. Microphone charging:

When the microphone's red indicator light flashes,it means low battery . Please turn it off and charge through Type-c charging cable with DC 5V adapter. The red indicator light will be on all the time when charging, and it will turn off when the mic is fully charged.

Notes:

1.The normal charge time is 1 hours,unplug the charger as soon as it is fully charged.

2.Fully charge before first use of the microphone to ensure best results.

3. Turn off the wireless microphone when not in use.

Trouble shooting:

1. Turn on the power switch, but the amplifier has no sound.

A. The blue indicator light is off: it means low power and you should charge the amplifier.

B. Turn up the volume on both the voice amplifier and the microphone.

2. Talk to the wireless microphone, but the amplifier has no sound.(for wireless version only)

A. Please confirm both voice amplifier and microphone are powered on.

B. Confirm the wireless microphone has been paired with the amplifier successfully.

Please pair the UHF manually again if necessary.

3. The voice amplifier has distinct howling.

A. Make sure the microphone is not close to the amplifier;

B. You may need to turn down the volume properly to avoid howling.

SHIDU After sales service:

If you have any questions, please feel free to contact us, we will try our best to provide best service.

www.10shidu.com Email: service@10shidu.com

十度音响

扩音器

使用说明书

USER MANUAL

关注十度微信公众号
回复型号"M801"
获取产品使用说明书

封底↓

安全警告：

1. 请勿将产品及配件靠近火源或任何过热的环境中。
2. 请勿将产品及配件接触水及湿气，不要在靠近水的地方使用本设备，也不要将产品浸入任何液体中，避免产品及配件受到水渍或水雾。
3. 请勿自行打开或任意拆解、维修电池组件，如果电池更换不当会有爆炸危险，严禁将电池投入水、火中或露近任何过热的环境中。
4. 本产品由外接电源适配器（5V 1.5A 电源）充电后使用，充电电后可方便的通过纽扣电源适配器插头断开电源电源。
5. 当用户暂不使用本产品时，请将产品置开关拨动至关闭状态关闭电源（参见产品操控示意图），避免电池电量的浪失。
6. 当算止使用无线设备或设备的使用会引起电子设备的干扰与安全隐患时，请关闭本产品。
7. 在悬然悬挂吸线，请关闭本产品，并遵守相关标示说明，以免引起爆炸或火灾。悬然悬挂区域包括但不限于：加油站、易燃或化工制品运输及储存设施、有爆炸危险标志的区域，有“关掉双向无线电设备”标志的区域。
8. 佩坐飞机时，请遵守航空公司有关规定和条例，在飞机起飞前关闭本产品，以免造成安全隐患。

产品卖点：

- 采用ABS素材表面晒纹工艺,外观简约大方
- 采用高保真强磁喇叭,高,低音源声有力,中频饱满
- 采用十度原声扩音电声系统
- MP3音频解码技术,支持TF卡/U盘播放
- 支持一键录音
- 音量调节旋钮

数据参数：

输出功率	10W
信噪比	≥80db
充电电压	DC 5V 1.5A
播放时间	7-8小时(最大音量)
频率范围	100Hz-18KHz
工作温度	-10℃-45℃
充电时间	3-4小时

注意：因本机为大功率扩音器，在小面积教室或会场使用时，请在输入麦克风前将音量调节至最小位置，以免声音过大，造成回声、啸叫。插入麦克风后可根据自己所在的场地面积进行音量调音，达到最佳扩音效果。

产品操控示意图：



主机操作说明：

1：电源开关/音量调节 2：模式切换 3：上一曲 4：播放/暂停

5：下一曲 6：录音 7：MP3模式显示灯 8：麦克风接口

9：U盘 10：TF卡接口 11：DC 5V接口 12.无电源示灯

使用方法：

1.将包装内的主机取出,用螺帮扣子扣住主机背面两凹槽孔,通过螺帮扣主机系在腰上或挂在肩上,可调节螺帮让主机处于腰间适合位置。

2.把头戴麦戴于头上,调节好麦克风位置,最好离嘴前方1-2CM处,把头戴麦克风另一端3.5mm插头插入主机MIC麦克风插孔内。

操作方式：

1.电源开关/音量调节：

将开关旋钮转动"ON"方向,当听到"咔"的一声,蓝色指示灯亮,表示已经开机;同时转动到"ON"方向为音量加,转动至"OFF"方向为音量减;将开关旋钮转动至"OFF"位置,当听到"咔"的一声,蓝色指示灯熄灭,表示机器关机。

2.模式切换：

在插入U盘/TF卡时可通过按住"M"键来对U盘/TF卡/蓝牙模式之间的切换。

3.上一曲:长按"⏮"为快退,短按为上一曲。

4.播放/暂停：

在音乐模式下短按"⏯"键为暂停,再次短按为播放。

5.下一曲:长按"⏭"为快进,短按为下一曲。

6.录音

在插入U盘或TF卡状态下,并将有线麦克风插入"MIC"话筒接口,短按"●"键机器提示唱一声,表示开始录音;在录音模式下,再次短按"●"键停止录音并播放当前录音,录音文件将自动保存至U盘或TF卡内,开机后在未插入麦克风的状态下,长按"●"键可播放最后一首录音文件。

注意:录音模式下,必须插入相配的麦克风方可实现正常录音。

7.MP3模式显示灯

8.麦克风接口:将有线麦克风插头插入此孔,进入有线人声扩音状态,操作时,请不要将麦克风拾音面朝向扩音器的扬声器,以免产生啸叫。

9.U盘 (仅限数据传输读取U盘数据)

10.TF卡接口

11.DC 5V充电接口:

当充电时,将DC 5V充电器连接主机DC 5V插口;再接锂电源(220V)插座充电,充电时红色显示灯长亮,充满电后,红色显示灯熄灭。

注意:

a.在工作时,机器提示电池电量低时,请及时充电;本机充电时间需要3-5小时;

b.第一次使用主机时,电池有小部份电量,但是为了达到最好的效果,请以充充满再使用;

C.本机适用于各类手机充电头为本机充电,充电完成 后可方便的通过扭转电源适配器插头断开电源。

12.充电指示灯

无线蓝牙操作说明：

第一步：开机,按"M"键切换至蓝牙模式,显示灯蓝灯在闪烁时为蓝牙模式;

第二步：打开手机,进入手机的"设置"菜单,找到蓝牙功能选项,打开手机的蓝牙功能,在"扫描"前提,搜索到"M801",点击"M801"连接即可;连接成功后蓝灯常亮。

第三步:连接成功后,即可通过主机播放手机教学教材,培训资料,歌曲播放等。



2.4G 无线麦克风使用说明(仅限无线版)：

2.4G无线麦克风开关/音量调节：将电源开关拨至"ON"位置为开机状态,"OFF"位置为关机状态。

自动配对:关掉2.4G无线扩音器开机,再打开2.4G无线麦克风。

2.4G无线麦克风蓝灯停止闪烁,表示配对成功可以扩音。

2.4G无线麦克风音量调节：

在使用时如果有啸叫声或2.4G无线麦克风音量小,调节2.4G无线麦克风的音量 "-"键音量减,音量"+"键音量加。

2.4G无线麦克风音量调节：

2.4G无线麦克风在工作时出现蓝色指示灯快速闪烁时,表示电池低电量要充电,请将2.4G无线麦克风电源关闭后,将2.4G无线麦克风DC 5V接口连接数据线TYPE-C接头,另一端数据线USB接头与DC 5V的USB电源接口连接;充电时2.4G无线麦克风蓝色指示灯长亮,充满电后红色指示灯熄灭。

注意:

1.正常充电时间约2-4小时;

2.第一次使用2.4G无线麦克风时,电池有小部分电量,但为了达到最佳扩音效果,请先充满电再使用。

3.充完电后可方便的通过拔掉电源适配器插头断开电源电源。

2.4G 领夹无线麦克风使用说明(仅限2.4G领夹无线版)

2.4G领夹无线麦克风开/关机:

长按3秒绿色指示灯亮,表示已开机;再次长按3秒绿色指示灯熄灭,表示已关机。

(此操作方法适用于领夹麦克风无声时手动配对)

打开主机,在任何模式下长按"M"键3秒,蓝灯快闪表示进入无线配对状态,再把2.4G领夹无线麦克风开机,长按配对键3秒,绿色指示灯停止闪烁表示已配对成功可以试讲话。

2.4G领夹无线麦克风音量调节：

在使用时如果有啸叫声或2.4G无线麦克风音量小,调节2.4G无线麦克风的音量 "-"键音量减,音量"+"键音量加。

2.4G领夹无线麦克风充电：

2.4G无线麦克风在工作时出现蓝色指示灯快速闪烁时,表示电池低电量要充电,请将2.4G无线麦克风电源关闭后,将2.4G无线麦克风DC 5V接口连接数据线TYPE-C接头,另一端数据线USB接头与DC 5V的USB电源接口连接;充电时2.4G领夹无线麦克风红色指示灯长亮,充满电后红色指示灯熄灭。

注意:

1.正常充电时间约2-4小时;

2.第一次使用2.4G领夹无线麦克风时,电池有小部分电量,但为了达到最佳扩音效果,请先充满电再使用。

3.充完电后可方便的通过拔掉电源适配器插头断开电源电源。

产品使用注意事项：

1、为了达到流畅扩音最佳效果，请将话头放置嘴正面前方1-2CM处打音话头处发音，若有啸叫，可适当调小音量或将机器与话头的距离拉远，以防互相干扰。

2、尽量避免频繁拔插麦克风接口，以免造成插口松动而引起接触不良，不可将话筒和音源插错；

3、为保证锂电池使用寿命，请以使用完再充电，经常充电将加速电池芯片老化，长时间不用时应每隔两个月充一次电；

4、因刚出厂的产品，可能会有轻微的气味，属正常现象，请放心使用；

5、本产品所有配件皆按本机工作需要设计，如需更换配件尽量使用本公司原装配件，以达到最佳工作状态；

6、本产品在充电和正常使用过程中可能会轻微发热，这属于正常现象；

7、请使用扭静钮软线来清洁清洁本产品，在清洁本产品时请先关闭电源开关，并拆开所有外部连接，请勿用化学物质擦拭（如：酒精，苯等化学溶剂或有腐蚀性的清洁剂或剂）；

8、请勿摔落、抛掷或容踩踏本产品，请勿擅自拆解本产品；否则不能享受本公司的免费保修服务。

9、符合"等功率相同原则"的电源适配器插头和技术要求"的其体条款和使用说明,采用的天线类型和性能,控制,调整及开关等使用方法；

10、不得擅自改变使用场景或使用条件,扩大发射频率范围,加大发射功率(包括额外加装射频功率放大器),不得擅自更改发射天线；

11、不得对其他合法的无线电台(站)产生有害干扰,也不得提出免受有害干扰保护；

12.应当承受辐射射频能量的工业、科学及医疗(ISM)应用设备的干扰或其他合法的无线电台(站)干扰；

13.如对其他合法的无线电台(站)产生有害干扰时,应立即停止使用,并采取措施消除干扰后方可继续使用；

14.在航空器内和依据法律法规,国家有关规定,标准划设的射电天文台,气象雷达站,卫星地球站(含测控,测距,接收,导航站)等军民用无线电台(站),机场等的电磁环境保护区域内使用微功率设备,应当遵守电磁环境保护及相关行业主管部门的规定；

15.禁止在以机场跑道中心点为圆心,半径5000米的区域内使用各类模型遥控器；

16.微功率设备使用时温度和电压的环境条件。

17.制造型号:M801。

常见问题的自我解决：

1、开关开启，扩音器没有声音

A、显示屏不亮，电池没电，充电解决；

B、检查话筒是否插错位置。

2、扩音器有明显噪声

A、正确配置话筒，将麦头远离扩音器方向，麦克风与主机保持60-70CM距离；

B、空间变小时应适当调低音量以减少回声造成啸响。

注意:

本字册描述的产品及其附件的某些特征和功能，仅供参考。

十度音响科技保留随时修改本手册中任何信息的权利，无需进行任何提前通知且不承担任何责任。

无损保严明:

本手册中的内容，除非适用法律要求，十度数码科技对本手册中的所有内容不提供任何明示或暗示的保证。

在法律允许的范围内，十度数码科技在任何情况下，都不对因使用本手册相关内容而产生的任何特殊的、附带的、间接的、继发性的损害进行赔偿，也不对任何利润、数据、商誉或可预期的损失进行赔偿。

进出口管制:

若需将此产品手册中描述的产品出口、再出口、或者进口，您应遵守适用的进出口管制法律法规。

深圳市十度音响科技有限公司 地址:深圳市宝安区福海街道机场工业区三区第八栋
Shenzhen SHIDU Digital Co. Ltd 电话:0755 - 27535950 传真:0755 - 29105099
全国统一客服热线: 4008 939 488
官方网址: WWW.10SHIDU.COM

本说明书所示产品图片及文字仅供参考,以实际产品为准。
产品图片及说明由我们尽力保证准确,但不能不承诺完全一致。
"SHIDU" "十度" "10" 为已注册商标,受知识产权保护,未经本公司允许不得使用。侵权必究。
本说明书内容,未经本公司书面允许,任何单位或个人不得以任何形式、通过电子、机械、复制、录音、录像、或任何其他方式,或以任何目的,传播或转载到任何媒体中,或翻译成任何语言。