关注十度微信公众号
回复型号"T11"
获取产品使用说明书

深圳市十度音响科技有限公司
Shenzhen SHIDU Digital Co.,Ltd.
Tel:+86 - 755 - 21635868 Hot line:4008 939 488
深圳市宝安区福海街道和平社区新兴工业路二区第八栋
Add:Building B, Zone 2, Xinxing Industrial Park, Heping Community, Fuhai Street, Bao'an District, Shenzhen,China

本说明书内容仅供参考使用，产品外观、功能以实物为准，如有更新恕不另行通知。本说明书编写尽力保证内容准确可靠，但不保证内容不出现错误或遗漏。产品实际功能以实际为准，因产品升级或其他原因造成的差异，我司不承担任何责任。"SHIDU"、"十度"、"十度音响"为我司商标，未经授权不得使用。本说明书版权所有，未经书面授权，任何单位或个人不得以任何方式复制、传播、摘编或用于其他商业用途。

十度音响 ❷ 天籁之音
SOUND OF CHANGE
让 交 流 更 声

十度音响

型号 T11
型号 T11
国家Hi-Fi认证
HOME Hi-Fi AUDIO USER MANUAL
使用说明

尊敬的用户：

您好！
欢迎您使用SHIDU中国HiFi音响产品！
SHIDU中国音响严谨将以精科技的品质和优良的服务进入您的工作和生活。您一旦选择了SHIDU中国音响，我们将会竭尽全力为您提供最优质的产品。请您在使用本设备前，仔细阅读本说明书，以便充分了解本产品的性能，以充分发挥本产品的优势。

无线保声筒：

本手册中的内容，除非是明法律要求，不提供任何担保不手段中的所有内容不提供任何明示或暗示的保证。在法律允许的范围内，十度音响对在任何情况下，都不对因使用本手册和文中提到的产品所出现任何特殊的、附带的、间接的、惩罚性的损害进行赔偿，也不对任何利润、数据、商誉或可预期的损失进行赔偿。

适合江湖者：

若尊师此产品手册中描述的产品出口，再出口或者进口，您应遵守适用的进出口管制法律法规。

安全警告：

01.请在将产品及所连此次源或任何过热的环境中。
02.请在将产品及所接触女及婴儿，不要在靠近水的地方使用本设备，也不要将产品放入任何液体中，避免产品及其外面因水渗透失真。
03.请在您的行打开或任意拆解，维修电池组，如果电池更换不当会有爆炸危险，严禁用电池加入水，火中或高温任何过热的环境中。
04.本产品由外接电源适配器（DC 18V/1.66A）充电后使用，充电电压可为便的通过提供电源适配器插头断开电网电源。
05.当用户发不使用本产品时，请将产品"电源开关"关闭（参见产品操作示意图）。最安电池电量的消失。
06.当禁止使用无线设备或设备的使用会引起电子设备的干扰与安全隐患时，请关闭本产品。
07.在易燃易爆区域，请关闭本产品，并请守相关标示说明，以免引起爆炸或火灾。
08.禁用表面呈现粗糙不平整于，加热后，易燃或此工有品设备及存储设备，有爆炸危险和古的区域。有"天然双向无线电设备"标志的区域。
09.除女飞机的，请遵守航空公司有关规定和条例，在飞机起飞前关闭本产品，以免造成安全隐患。
09.电源线不能被挤压，拉扯、弯曲、打结、易被重物或人踩踏，以防止电源线的绝缘层被损坏导致短路。
10.如机器发生冒烟或其他异常现象，请迅速拔出电源插头，请发引起潜伏事故，并联系当地经销商进行维修。
11.若电的通用产品非是于空旷的区域充电，应离可开物，以免引起火灾。
12.仅适用于非热带气候条件下安全使用，仅适用于海拔2000米以下地区安全使用。

产品特性：

01.十度原外-IP插箱，80W功率；
02.配置4寸低音喇叭*2+1.5寸低频高音喇叭*2；
03.14.4V 5200毫安动力电池；
04.智能蓝牙5.3，支持网络同步解好，音乐在线播放；
05.插入耳机功能；
06.多种麦克风音效，加音混响及音量调节；
07.UHF无线音全麦克风；
08.支持TF卡，U盘音乐播放功能。

音箱功能说明：



01.电源开关：ON为电为开机，OFF为电为关机，不使用时请注意关闭电源开关。
02.插功能口　03.插入耳口　04.音频输入　05.TF卡插口
06.DC 18V输入口：表音箱设备充电输入口，请使用原厂标配充电器为本机充电。
07.USB接口（仅限音频传输读取U盘）



08.音声　09.流行　10.专业　11.室内/室外音响
12.上一曲　13.播放/暂停　14.下一曲
15.模式
1.按住此按键可进行音量选择，再单击确定键模式，以音频放，TF卡播放，UHF无线模式。
2.在TF卡和U盘模式下长按"M"键显示屏显示"ONE"为单曲循环，再次长按显示屏显示"ALL"为全部循环。
16.音乐音量　17.麦克风音量设置

音乐播放功能说明：

01.支机U盘、TF卡插口，支持音频格式：mp3、WAV、WMA、FLAC和APE音乐格式播放，解码音质高保证为音音设计但您安装的音乐体验。
02.播放音乐按键：在播放状态时，短按此键可暂停播放音量，再次短按此键即可继续播放。
03.上一曲/下一曲按键：在音乐播放模式下，短按此键可切换上下曲目。

蓝牙功能操作说明：

第一步：开机按键式"M"键切换到蓝牙模式（当主机显示"蓝牙已准备好，正在等待配对"，显示屏上显示"BLUE"时为蓝牙模式）。
第二步：打开手机，进入手机的"设置"菜单，找到蓝牙功能选项，打开手机的蓝牙功能，点"扫描"按钮，待搜索到"T11"选项即可；同时主机也能识别蓝牙已配对。
第三步：配对成功后，即可通过于1米内蓝牙机播放音乐，或拨打、接收通话等。同时也可与其他蓝牙风格合适使用，如耳机、键盘、通过手机内部软件实现同步聚等功能。



充电功能操作说明：

充电时，请先将主机电源开关关闭，关机状态充电，请用原厂标配电源适配器接上220V插座进行充电，充电时间约5~6小时充满，充满电后应拔掉电源适配器插头断开电网电源。

○电池电量指示：显示屏上有电量指示图标，共分为4格，每格代表25%的电量，4格全满时为100%，3格为75%……依此类，当主机显电量显示符为"□"空格时表示电池耗满，请及时充电，充电时电量指示图标会闪烁，充满电后电量指示图标"■"4格全满，充满电后每次需要提充每5小时，这样做延长电池使用时间。

○若电池欠压，请在45分钟内把电充满，当主机电量完全耗尽自动关机后请将主机放置在空旷的区域远离可燃物品关机充电。

无线话筒功能说明：



话筒功能说明：
1.启定常规关于，请把插在话筒接收器前的长米，30度范围内使用。
2.操作话筒前时，将话筒调对准机器的话筒接口，请把接与机器之间不百有障碍物。
3.如果遇到接收器处于直接接收强光照射的位置或容易可能失真，在此情况下，请将机器移开，以避免直接照射。
4.避免新印刷电路容易使用，请勿将直接印刷电路容易使用。
注：说明书为示意图，具体以实物为准。

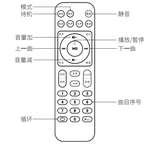

无线话筒功能说明：



01.UHF无线话筒所(关机)：
长按"Φ"键开机，屏幕显示默认频点值，打开主机即可实现UHF无线扩展：在开机状态下，长按"Φ"电源开关键，屏幕显示表示这是已关机，在使用过程中短按"-"、"+"为切换频点，长按"+"为加音量；短按"-"为切换频点，长按"-"为减音量。
（注：这是可切换设备频率，短按任意一个键即可选择第一）

02.UHF无线话筒手动配对：（此操作方法运用于适用无声好手或配对）
打开主机按"M"键切换到UHF模式，再长按"M"键3秒，UHF闪烁表示已进入UHF无线配对状态。
将手持式UHF无线话筒开机，显示当前的频点，快速按按开关键3次当前频点闪烁，表示无线话筒与机器已手动配对成功。第二法是指再次长按"M"键3秒，UHF闪烁表示已进入UHF无线配对状态，将手持式UHF无线话筒开机，显示当前的频点，快速按按开关键3次当前频点闪烁，表示第二次无线话筒与机器已手动配对成功；即可实现无线扩展广度。
注：配对第二无法同时相点一定要和第一无法同频点错开，以免相互干扰。

03.UHF无线话筒电量说明：
○在使用过程中，手持式UHF无线话筒显示屏电量显示符为"▮"满格时，表示电量充足；当显示电量显示符为"□"空格时，表示电池低电，请及时充电。
○充电时，先将手持式UHF无线话筒关机后放置机配套的USB充电线，长手持式UHF无线话筒充电；充电时，手持式UHF无线话筒红色指示灯长亮，充满电后红色指示灯熄灭。

注意：
01、充电时间约3~6小时充满；
02、第一次使用时，手持式UHF无线话筒时电池有小部分电量，但为了达到最佳扩音效果，请先充满电再使用；
03、充电电压只可使用适配器电源适配器插头断开电网电源；
04、本机自带充电线，适用电源手机电源适配器为本机充电。

技术规格：
额定功率：≤80W
噪噪比：≥90dB
频率响应：30Hz~20KHz
输入阻抗：DC 18V=1.66A
以上规格为样机技术规格，仅供参考。

仅适用于非热带气候
Only for temperate climate

仅适用于海拔 2000 米
以下地区安全使用

产品使用注意事项：
1、为了达到语质扩音最佳效果，请将麦头放置离正面前方1~2CM处对准麦头处发音，若有喷吹，可适当调小音量或将机器与麦头的距离拉开，以防互相干扰；
2、将键盘线接到键盘音乐线口，以免造成插口松动导致键盘不音，不可将键盘和音源插错；
3、为保证音响使用寿命，请以使用说明书为准，切勿使用说明书以外的方法使用；长时间不用的话电源线请拔掉；
4、因即时被性能强，不可将机器和银行卡等带磁性的东西放一起，以免造成头磁性原来不必要的麻烦；
5、本产品所有配件按说明书的工作需要设计，如需要换配件可要使用本公司原装配件，以达到最佳工作状态；
6、本产品在充电和正常使用过程中可能会轻微变热，这属于正常现象；
7、请使用机静电和有来清洁清洁机本产品，在清洁本产品时请先关闭电源开关，并拔开所有外设连接，请勿用化学物质擦拭(如:酒精、苯等化学溶剂或有腐蚀性的清洁擦试剂)；
8、请勿拆装，否则或者保证本产品，请您提自解本产品，否则不被享受本公司的免费保修服务。
9、并在"自动停短距离无线电发射设备目录和技术要求"的具体条款和使用场景，采用的无线类型和性能，控制，调整及并未按使用方法。
10、不得擅自改变使用场景或使用条件，扩大发射频率范围、加大发射功率(包括额外加装射频功率放大器)、不得擅自更改发射天线；

11、不得对其他合法的无线电台(站)产生有害干扰，也不得要出免受有害干扰保护；
12、在当多家辐射频率密集的工业、科学及医疗(ISM)应用设备的干扰或其他合法的无线电台(站)干扰；
13、如对其他合法的无线电台(站)产生有害干扰时，应立即停止使用，并采取措施消除干扰后方可继续使用；
14、在航空器内和其他通信或、国家有关规定、标准规定的射电天文台、气象雷达站、卫星地球站(含测控、测距、接收、导航站)等军民用无线电台(站)，机场等的电磁环境保护区域内使用微功率设备，应当遵守电磁环境保护及有关行业主管部门(部)规定；
15、禁止在以无线电通信中心为圆心，半径5000米的区域内使用各种型号或频段；
16、请您保证使用时注意其电池及的设备寿命。
17、制造型号：T11。

故障自我检查：
用户在使用本机过程中，如发现有问题，请按下面的故障检修表进一检查。仍然不能解决问题，请将本公司在当地的经销商寄来或送到本公司的维修部内检查。故障检修表具体详见下表所示：

故障现象	可能原因	处置方法
打开电源，无任何声音	a.音机没电。 b.功率放大器坏。 c.音频调节旋子最小位置。	a.将主机充电后检查显示屏是否点亮正常开机。 b.重新检查设置音频输入端口号。 c.适当调节音量。
声音失真	a.音量调节过大。 b.音响可能损坏。	a.将主音量调小。 b.检查音频是否损坏，若损坏，请联系维修。
插拔无声	a.U盘容量格式不对。 b.插件不合适插接者或。 c.U盘/TF卡无电或坏。	a.将此U盘/TF卡，重新用可容纳文件格式，重新格式化。 b.将此U盘/TF卡。 c.更换U盘/TF卡。
无线话筒接收器无声音	a.电池没有。 b.无线话筒电池松脱。 c.音响电量充足。	a.重新充电至电池电量。 b.检查电池是否接牢固。 c.将电量充足后再使用。

Welcome to use SHIDU speaker, T11 is a multifunction portable speaker with microphone karaoke functions. Please enjoy it after reading the user manual.

Main features:
1.SHIDU HiFi portable speaker, 80W output power;
2.Equipped with 4-inch woofer*2, 1.5-inch tweeter*2;
3.Built-in 14.4V 5200mAh lithium battery;
4.Bluetooth 5.0, support wireless karaoke function;
5.Support audio input and audio output ;
6.Multiple microphone sound effects, independent microphone volume adjustment;
7.Support double UHFwireless microphone, stable signal and clean sound;
8.Support TF card and USB flash drive play music.

Technical Parameters:

Power output:	≤80W	Frequency response:	30Hz-20KHz
S/N ratio:	≥90dB	Recharging voltage:	DC 18V 1.66A

Structure Instruction:



1. Power on/off　2. Audio output　3. Audio input
4. Musical instrument input
5.TF card slot: Support TF card, maximum up to 32G.
6.DC 18V Charging port: Pls use original adapter to charge.
7.USB slot: Support USB flash drive, maximum up to 32G.



8.Original microphone sound effect
9.Popular microphone sound effect
10.Professional microphone sound effect
11.Indoor and outdoor sound effect
12.Previous: Short press to select previous audio file.
13.Play/Pause: In audio playing mode, press it to pause; press it again to play.
14.Next: Short press to select next audio file.
15.Mode:
a.Short press to choose Bluetooth mode, USB flash drive mode, TF card mode and UHF mode.
b.In music playing mode, long press this button switch to single song repeat with screen display "ONE", short press this button again to switch back to all repeat with screen display "ALL".
16.Music Volume: To adjust the music volume.
17.Microphone Volume: To adjust the microphone volume.

TF card/USB flash drive play:
The speaker will automatically play the audio file after insert TF card/USB flash drive, and short press the "⏮/⏭" button to select the previous song and the next song. This speaker supports playing MP3 WAV WMA FLAC audio format.

Bluetooth Function:
Please pair your Bluetooth device as follows:
Step 1: Switch on the speaker and press "M" to enter into Bluetooth mode, (The Bluetooth mode is ready with voice prompt "Bluetooth is waiting for connection" and "BLUE" is displayed on the screen.)

Step 2: From your mobile setting, turn on the Bluetooth function, Then search for "T11" and connect, Bluetooth pairing is successful with a voice prompt "Bluetooth is connected".
Step 3: When playing music, please keep close to the speaker to keep the signal stable, If the distance is too far(more than 10 m) , the Bluetooth will be disconnected.

Charging function:
Please power off speaker when charging, please use the standard adapter, the other end connects with the power supply AC 110-220V to charge, Please unplug the adapter timely after fully charged (the charging time is normally 4-6 hours).

Battery status: There are 4 battery indicators on the screen and each represents 25%, Full is 100%, 3 are 75%,... Please charge it timely when the speaker show "□" means low battery, please charge in time, The battery indicator will flashes when charging and it will stop flashes after fully charged and battery show "■" 4 indicators are full.

Please recharge the battery within 48 hours if the voltage is too low, Out of power is bad to the battery.

Remote function:
1.Normally, the remote control should be in front of the receiving window and within the scope of 6M & 30°.
2.Please point the remote control toward the receiving window and avoid the obstacle.
3.Please avoid the strong light.
4.Please don't use old & new battery at the same time.
Note: Please refer to the real product.

Wireless Microphone Operation:

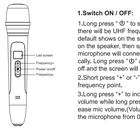

1.Switch ON / OFF:
1.Long press "Φ" to switch on and there will be UHF frequency point by default shows on the screen, Turn on the speaker, then speaker and microphone will connect automatically, Long press "Φ" again to switch off and the screen will go out.
2.Short press "+" or "-" to change frequency point.
3.Long press "+" to increase mic volume while long press "-" to decrease mic volume.(Volume level on the microphone from 0-20.)

2.Pair the UHF Wireless MIC Manually: (This operation only suits for no sound from the MIC)
Step 1: Switch on the speaker, short press "Mode" key to switch to UHF mode, then long press "Mode" key 3 seconds to enter into UHF wireless pairing status with voice prompt "UHF is waiting for connection",
Step 2: Switch on the UHF wireless MIC, short press "+" or "-" to change frequency point. Quick press the "Φ" 3 times and then current frequency stop flashing means pairing is successful.
Please manually pair the second microphone in the same way. Then it's possible to amplify voice with two wireless MIC.
Note: When pairing the second microphone, please stagger the frequency point of the first microphone to avoid interference with each other.

3.Microphone charging instructions:
In working status, it has sufficient battery power with "▮" Indication showed on screen; it's low battery with "□" indication showed on screen and please charge the microphone timely,
Please noted :
1.It takes 3-4 hours to fully charge,
2.Please fully charge the microphone before first use,
3.Please unplug the adapter after fully charged,
4.The speaker comes with a charging cable, which is suitable for any mobile phone adapter.

Trouble Shooting:
1.Switch on the speaker but no sound
1.1.No audio input: Please retest and set the audio inout;
1.2.Haven't turned on the volume: Please adjust the volume properly;
1.3.The speaker has run out of battery,please charge it to switch on;
2.With sound distortion
2.1.The volume is too high: Please turn down the volume properly;
2.2.The speaker is broken: Please contact us for maintenance;
3.No sound with wireless microphone
3.1.Haven't switched on the MIC: Please turn on the MIC;
3.2.Haven't turned on the MIC volume on the speaker: Please adjust the volume properly;
3.3.The wireless MIC is low battery: Please change the battery,
4.No sound with MP3 playing
4.1.The audios' format in USB flash drive or TF card is wrong: Please turn the format to MP3;
4.2.Chaotic procedure with wrong operation: Please restart the speaker;
4.3.Haven't inserted the USB flash drive / TF card properly: Please insert the USB / TF card properly.

5.Can only work several minutes after charged
5.1.The battery is damaged, please replace the battery with the same model;
5.2.The connecting cable of battery is loosened or disconnected: Please contact us for maintenance;
5.3.Hasn't full charged the speaker: Please full charge it before using.

SHIDU After sales service:
If you have any questions, please feel free to contact us, we will try our best to provide best service.
www.10shidu.com　Email: service@10shidu.com